



Energy Saving Data Collecting Server  
EcoWebServerIII  
MODEL

# MES3-255C-EN

User's Manual (Hardware)

- Before operating the instrument, you should first read thoroughly this operation manual for safe operation and optimized performance of the product. Deliver this user's manual to the end user.

## ■ Introduction

Thank you for purchasing Mitsubishi Energy Saving Data Collecting Server (EcoWebServer III).  
 This instruction manual explains how to install and use the product.  
 Before using the product, read the instruction manual carefully for correct operation.  
 Be sure to read "1 Safety Precautions" to correctly handle the product.  
 Keep this instruction manual in a safe, accessible place for ready reference.  
 Make sure that this instruction manual will be delivered to the end users.

For details on setting EcoWebServerIII, refer to "**User's Manual - Setting (IB63919)**".  
 For details on setting EcoWebServerIII, refer to "**User's Manual - Operating (IB63918)**".












## ■ Packing materials and instruction manual

To reduce the load on the environment:

- Packing materials use corrugated cardboard.
- The instruction manual uses recycled paper.

## ■ Packaged contents

Make sure all the following items are in the package.

Product name	Qty.	Product name	Qty.
 Energy saving data collecting server (main unit)	1	 (Black: 110Ω1/2W) (White: 130Ω1/2W) CC-Link terminal resistor	Black × 2 White × 2
 Compact Flash memory card (software)	1	 DIN rail mounting adaptor	Small × 2 Large × 1
 Setting software (CD-R) ·Instruction manual included	1	DIN rail mounting set	
 Battery (built in the bottom of the main unit's server section)	1	 DIN rail mounting screw (M5 × 10)	2
 Board mounting screw (M4 × 12)	4	 DIN rail mounting square washer	2
Instruction manual (* this document)	1	 DIN rail fixing metal bracket	2
		 LAN port cap	2

# Table of Contents

1.	Safety Precautions .....	4
2.	Main Features .....	9
3.	Name and Function of Each Part .....	10
4.	Procedures for Installation and Setting .....	13
5.	Main Unit Installation(Installation de l'unité principale).....	14
5.1	Installation on IEC rail (35 mm wide)(Installation sur un IEC rail (35 mm de large)) .....	14
5.1.1	Mounting IEC rail mounting adaptor (Montage d'adaptateur pour monter sur IEC rail) .....	14
5.1.2	Mounting IEC rail fixing square washer (Montage de rondelle carrée pour fixer IEC rail) .....	15
5.1.3	Installing main unit on IEC rail(Installation de l'unité principale sur IEC rail) .....	15
5.1.4	Fixing main unit(Fixation de l'unité principale) .....	17
5.2	Direct installation on board(Installation directe une planche) .....	18
6.	Battery Installation and Replacement.....	20
6.1	Installing battery .....	20
6.2	Replacing battery .....	20
7.	IP Address Setting.....	21
7.1	Setting IP address .....	21
7.2	Checking IP address .....	26
8.	Connection Diagram.....	27
8.1	Power supply section(Section de l'alimentation électrique) .....	27
8.2	Ethernet communication section(Section de communication Ethernet).....	27
8.2.1	For initial setting (IP address setting) (Pour les réglages initiaux (adresse IP fixation)) .....	27
8.3	Ethernet communication section (CH2 to PLC) (Section de communication Ethernet (CH2)) .....	29
8.3.1	For operation(Pour opération).....	29
8.4	CC-Link communication section(Section de CC-Link communication).....	30
8.5	Contact output section(Section de sortie contact).....	31
9.	Specifications .....	32
9.1	Hardware specifications .....	32
9.2	Operation environment.....	35
10.	External Dimensions .....	36
10.1	External dimonsions .....	36
10.2	Setting conditions .....	37
11.	Options .....	37
12.	Troubleshooting .....	38
13.	Warranty .....	38

# 1. Safety Precautions

## ■ Precautions concerning the operating environment and usage conditions

Do not use the product in the places as follows. Failure to follow this instruction may cause malfunctions and reduced life of the product.

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>● Ambient temperature exceeds 0° to +55°C. (Température ambiante excède 0° à +55°C.)</li> <li>● Daily average ambient temperature exceeds 35°C. (Température ambiante quotidienne et moyenne excède 35°C.)</li> <li>● Relative humidity exceeds 5% to 95% or condensation is observed. (Humidité relative excède 5% à 95% ou condensation est observée.)</li> <li>● Altitude exceeds 2000 m. (Altitude excède 2000 m.)</li> <li>● Dust, corrosive gas, saline and oil smoke exist. (Poussière, gaz corrosif, salin et huile fumée existe.)</li> </ul> | <ul style="list-style-type: none"> <li>● Frequent vibration or impact exists. (Vibration fréquente ou impact existe.)</li> <li>● Rainfall or water droplet hits the product. (Pluie ou gouttelette frappe le produit.)</li> <li>● Exposed to direct sunlight. (Exposé à lumière du soleil directe.)</li> <li>● Metal pieces or conductive materials blow. (Pièce métal ou matière conducteur souffle.)</li> <li>● Under strong electromagnetic field or noise. (Sous champ électromagnétique fort ou bruit.)</li> </ul> |
|--|---|

## ■ Precautions concerning the installation

Please read this instruction manual before installation.



### Caution

- The product shall be installed by a technician who has expertise in electric work such as safe installation and wiring.
- Always handle the end face of metal parts with care. The sharp part may cause injuries.
- During threading or wiring work, take precaution so that any metal chip or a part of wire cut does not enter the product.
- Make sure to use the connection diagram for correct wire connection. Incorrect wiring may cause the device malfunction, fire or electric shock.
- Never do hot-line jobs. Otherwise, it may lead to electric shock, fire or device problems.
- Use appropriate size of electric wires. If inappropriate size of electric wire is used, it may cause fire due to generated heat.
- Use an appropriate size of solderless terminal which fits the wire. If inappropriate solderless terminal is used, wire breakage or contact failure may occur, which may cause the device malfunction, failure, burnout, or fire.
- For UL/c-UL standard, please use the copper conductors wire which temperature rating is 60 °C /75 °C . (Pour UL/c-UL standard, utilisez le conduit en cuivre dont la température classée à 60 °C /75 °C.)

Part	Wire size	Appropriate solderless terminal
Power supply section terminal block	0.75 to 2.0 mm <sup>2</sup>	RAV1.25-3.5 RAV2-3.5
CC-Link communication section terminal block	Version 1.10-compatible CC-Link dedicated cable	R1.25-3
Contact output section terminal block	0.3 to 0.75 mm <sup>2</sup>	R1.25-3 (Solderless terminals with a crimp sleeve cannot be used.)

- Make sure all the fittings are securely tightened. Failure in tightening may cause the device malfunction, fire, or electric shock. (Assurez-vous que tout le serrage est fermement serré. Manque de serrage peut causer mauvais fonctionnement du dispositif, feu, ou commotion électrique.)
- Fixing fittings must be tightened to the specified torque. Excessive tightening may cause damage to terminals or screws. (Fixation du serrage doit être serrée à couple de serrage spécifié. Serrage excessif peut endommager du terminal ou vis.)  
Insufficient tightening may cause the device malfunction, fire, or electric shock. (Serrage insuffisant peut causer mauvais fonctionnement du dispositif, feu, ou commotion électrique.)
- Accessory of LAN port cap can be used for dust-proof.
- Please return the unit which you removed for wiring. The units are only support to be worked as EcoWebServerIII.  
It will be not worked without using for EcoWebServerIII.
- Please do not replace for any unit of EcoWebServerIII. Operation verification of EcoWebServerIII is confirmed as the purchase. It may cause a malfunction or failure if EcoWebServerIII is used in any other combination.

Part (Partie)	Tightening torque (Couple de serrage)
Terminal screw for power supply section terminal block (Borne de terminal pour terminal bloc dans la section d'alimentation électrique) (M3.5 screw) (Vis M3.5)	0.8 to 1.0 N·m
Terminal screw for CC-Link communication section terminal block (Borne de terminal pour terminal bloc dans la section de CC-Link communication) (M3 screw) (Vis M3)	0.42 to 0.58 N·m
Mounting screw for CC-Link communication section terminal block (Borne de montage pour terminal bloc dans la section de CC-Link communication) (M3.5 screw) (Vis M3.5)	0.66 to 0.89 N·m
Terminal screw for contact output section terminal block (Borne de terminal pour terminal bloc dans la section de contact sortie) (M3 screw) (Vis M3.5)	0.42 to 0.58 N·m
Mounting screw for contact output section terminal block (Borne de montage pour terminal bloc dans la section de contact sortie) (M3.5 screw) (Vis M3.5)	0.66 to 0.89 N·m
Unit fixing screw (Vis pour fixation l'unité) (M3 screw x 12) (Vis M3)	0.36 to 0.48 N·m

- Make sure that all the terminal covers are mounted. Failure to mount them may cause electric shock.  
(Assurez-vous que tout les couvercle sont attachés. Manque d'attachement peut causer mauvais fonctionnement du dispositif, feu, ou commotion électrique.)
- Avoid installing in a panel where high pressure equipment is installed.  
Please install a surge suppressor in the device which is prone to noise.
- CC-Link communication signal line and other signal lines, auxiliary power supply line, the power supply frequency input line to prevent the introduction of noise, please do not approach and unity of the power line or high voltage line. Please separate the separation distance when the signal line and the power line / high voltage line are parallel as a guide. (Excluding terminal block input section)

[CC-Link communication signal line]

Condition	Distance
All power lines	More than 100mm

[Other signal line / auxiliary power line / power frequency input line]

Condition	Distance
Power line of 600V or less	More than 300mm
Other power lines	More than 600mm

- Please connect the shield wire of the CC-Link communication cable to the SLD terminal of each of the CC-Link communication terminals.
- To prevent induction noise, keep control lines and communication cables as far away from power lines as possible.  
(We recommend that you keep a distance of 100 mm or longer between them.)  
Do not place them in a board containing high-voltage equipment.  
Mount surge absorbers on equipment that is likely to produce noise.
- Connect both ends of the shield line for CC-Link communication cable to the "SLD" terminal of the units.  
"SLD" and "FG" are connected together inside each unit.  
Make sure to insulate the shield line using vinyl tape or the like.
- For the actual usage, perform D-type grounding dedicated for the "FG" terminal.
- Perform insulation withstand voltage tests and insulation resistance tests without connecting the FG terminal to the external case (ground).

## ■ Precautions concerning the preparation before use

- Make sure that your installation site meets the requirements for the operation environment and usage conditions.
- Before use, perform the settings for the product. Wrong settings may cause the product to malfunction.
- Check the power ratings of the product.
- After installing the product and performing wiring work, peel off the dustproof seal.  
Failure to peel it off may cause the product to malfunction due to heat generation.
- The product has a built-in lithium battery. It is not connected to the product when shipped from the factory.  
Connect it before using the product. (Refer to "6. Battery Installation and Replacement" of this manual)

## ■ Precautions for use


- Use the product within the ratings specified in “9. Specifications” of this manual. If it is used outside the ratings, it may cause not only malfunction or failure but also fire or burnout.
- Settings including an IP address assignment are required to connect the product to the network (Ethernet). Before use, perform an IP address assignment and other necessary network settings using the supplied configuration software.(Refer to “IP Setting” of Setting manual)
- The product is configured as follows when shipped from the factory:

**IP address = 192.168.10.1, subnet mask = 255.255.255.0, gateway = nothing**

When you connect the product directly to a single PC, you do not have to change these settings.


- The product has a built-in clock. Before use, set the current date using the supplied configuration software.
- Before operating the product, check that active bare wire, etc does not exist around the product.  
If any bare wire is found, stop the operation immediately, and take appropriate action such as isolation protection.

- Please contact our sales staff when you consider applying the product to special purpose, including use in devices and systems for nuclear plant, aerospace engineering, medical care or automobile. (See the end of this document for details.)
- Current might exceeded the specified value when the power is cycled immediately after the power is breaking off (in 5 seconds). Please turn on the power more than 5 seconds after breaking off.

	<b>Caution</b> ● Do not disassemble or modify the product. It may cause failure, electric shock or fire.
---	--

## ■ Precautions for maintenance and inspection

- Use a soft dry cloth to clean off dirt of the product surface.
- Do not let a chemical cloth remain on the surface for an extended period of time nor wipe the surface with thinner or benzene.
- Check for the following items to use the product properly for a long time.  
Check for the items (1) to (3) once or twice every six months.  
Check for the item (4) once a year.  
(1) No damage on the product (2) No abnormality with LED indicators (3) No abnormal noise, smell or heat  
(4) No looseness with installation, wire connection to terminal blocks, and connector connection (Check these items under the electric outage condition.)

	<b>Caution</b> ● Checking looseness with installation, wire connection to terminal blocks, and connector connection must be done under the electric outage condition.
---	---

## ■ Precautions for storage

- To store the product, turn off the power and remove wires, and put it in a plastic bag.
- To keep the power off for a long time, remove the battery connector.  
(The battery's accumulated backup time for electric blackout is 13,700 hours (1.57 years). Failure to use a battery over backup time may cause a data clear of the product.)
- For long-time storage, avoid the following places. Failure to follow this instruction may cause failure and reduced life of the product.

<ul style="list-style-type: none"> <li>● Ambient temperature exceeds -25°C to +75°C.</li> <li>● Daily average ambient temperature exceeds 35°C.</li> <li>● Relative humidity exceeds 5% to 95% or condensation is observed.</li> <li>● Dust, corrosive gas, saline and oil smoke exist.</li> </ul>	<ul style="list-style-type: none"> <li>● Frequent vibration or impact exists.</li> <li>● Rainfall or water droplet hits the product.</li> <li>● Exposed to direct sunlight.</li> <li>● Metal pieces or conductive materials blow.</li> <li>● Under strong electromagnetic field or noise.</li> </ul>
--	--

## ■ Precautions for disposal


- The product shall be properly disposed of in compliance with the "Wastes Disposal and Public Cleansing Act".
- The product has a built-in lithium battery. The lithium battery shall be disposed of in compliance with your local regulations.
- In EU member states, there is a separate collection system for waste batteries. Dispose of batteries properly at the local community waste collection/recycling center.  
The symbol shown below is printed on the batteries and packaging of batteries and devices with built-in batteries used for Mitsubishi programmable controllers.



Note: This symbol is for EU member states only.

The symbol is specified in the new EU Battery Directive (2006/66/EC) Article 20 "Information for end-users" and Annex II.

The symbol indicates that batteries need to be disposed of separately from other wastes.

	<b>Caution</b> ● There may be some electricity left in the lithium battery removed. Keep it away from other metal parts because its contact with the metal parts may cause heat, rupture, or fire.
---	--

## ■ Network building

- For installation and setting of web browsers and JavaVM (Java Virtual Machine) and inquiries about their technical issues, contact your network administrator or appropriate department.
- For installation and setting of servers such as SMTP (mail transfer) servers and FTP (file) servers and inquiries about their technical issues, contact your network administrator, appropriate department or the manufacturers for those servers.
- We don't offer technical support for the above.
- When needed for keeping system security against illegal access from outside, users should take proper measure. We do not assume responsibility for any trouble arising from illegal access.  
We recommend users to note the followings.

1) Use LAN for preventing illegal access from outside.

2) Take measures like firewall and VPN when connecting internet.

3) Before using, change the default account (login ID, password).

Set the account so as not to leak the account information according to the following precautions.

Avoid using simple string like Name, birth date and numbers.

Set the complex login ID and password at least 8 characters by mixing uppercase or lowercase alphanumeric characters.

## ■ QR code

- QR code is for production management. Please do not use.


## ■ Special purposes

- Please contact our sales staff when you consider applying the product to special purposes, including use with devices and systems for nuclear engineering, aerospace engineering, medical care, or automobiles. (See the end of this document for details.)




## 2. Main Features


- The product has an HTTP server function that can send data over the Internet/Intranet via Ethernet that is collected from measuring instruments using CC-Link communication. The transmitted information can be viewed in a graph or list format on PCs connected to the Intranet.
- All the software programs necessary to view collected data are built in the product. You do not have to install additional software on your PC to view the data.
- Also installing a mail server (SMTP server) or file transfer server (FTP server) allows you to send email notifications when an upper/lower limit alarm operates and to save measurement data in a CSV format by automatic transfer.

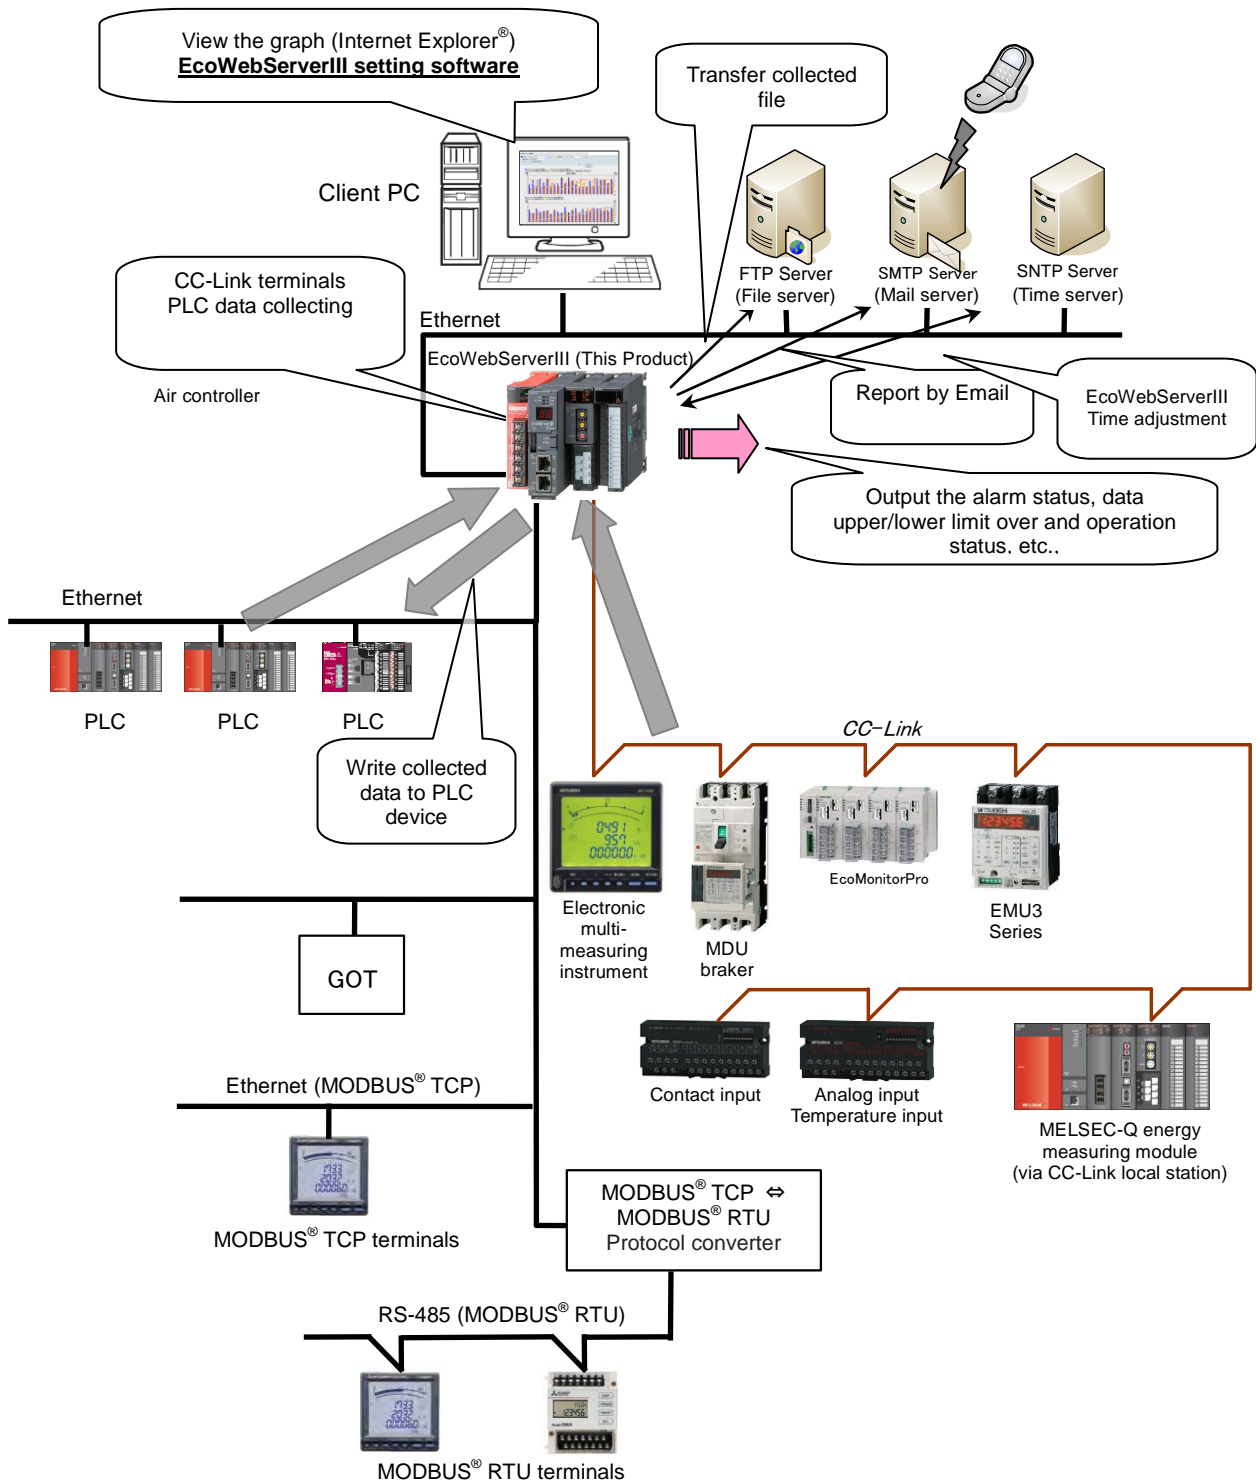


### 3. Name and Function of Each Part

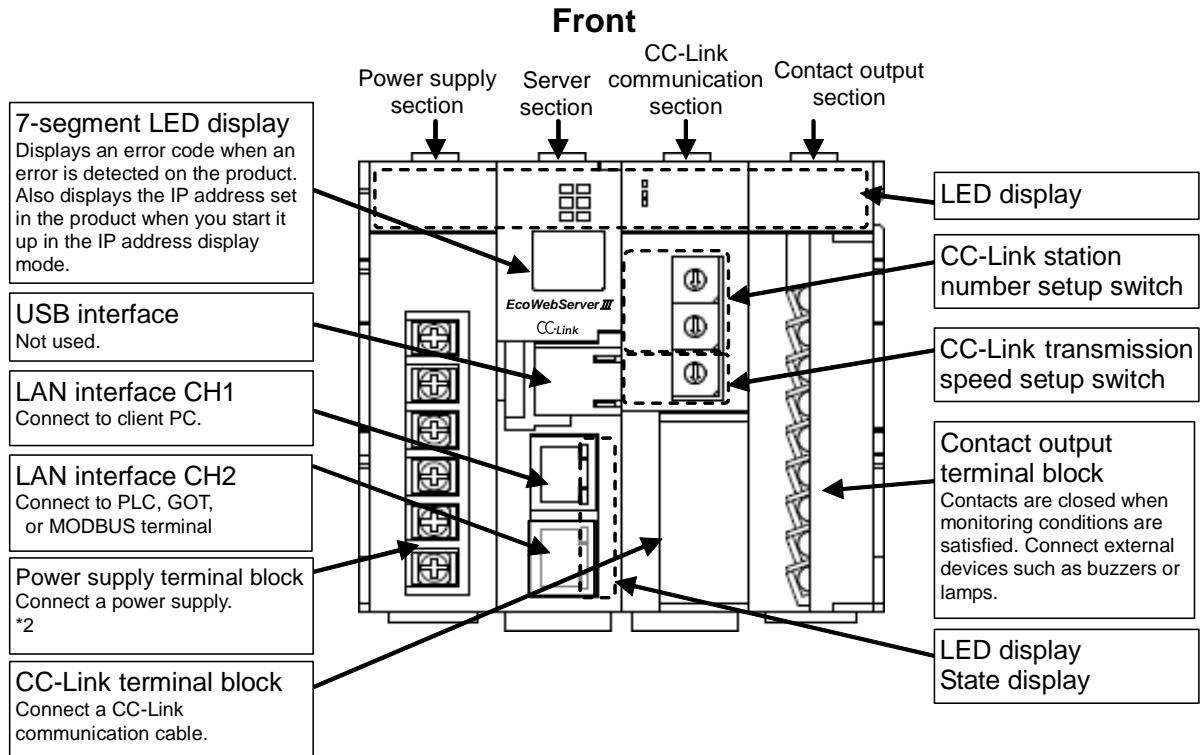

#### Front (Server section with the cover opened)

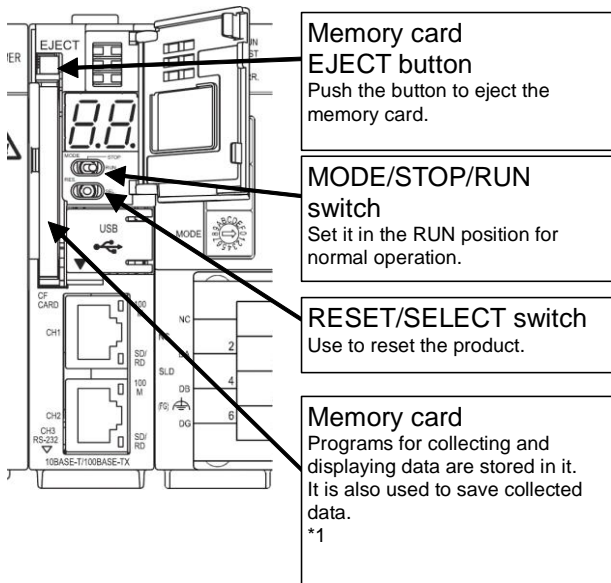

#### Bottom

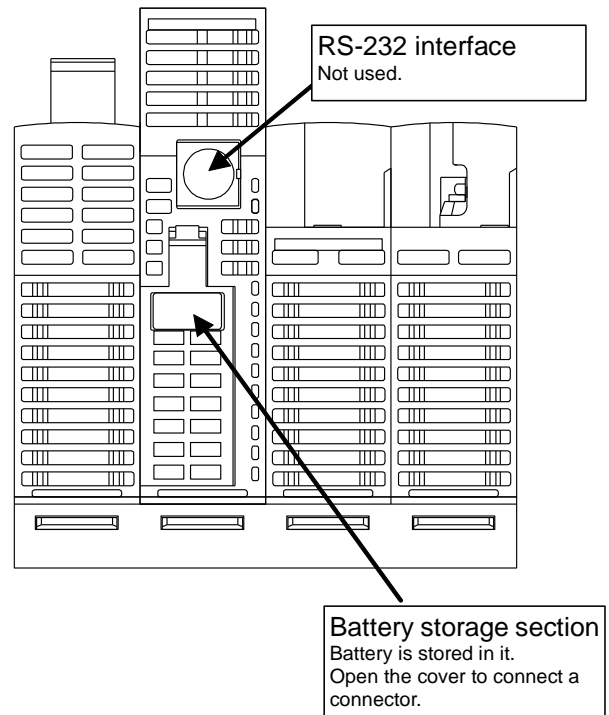

- \*1 Memory card should be in the product all the time. Removing it while the product is operating or it is been accessed may cause the product to malfunction. Before removing it from the memory card slot, make sure to hold the RESET/SELECT switch to the "SEL." position and to turn the power off after the "CF CARD" LED goes out.
- \*2 Connect a power supply of 100-240 V AC (+10%, -15%) 50-60 Hz. Do not connect any power supply other than the above, otherwise it may cause malfunction.

◆ LED display

Part	Display name	Status	Operation
Power supply section	POWER	Power supply display	Lights green: Power is on.
Server section	RUN	Operation display	Lights green: MODE/STOP/RUN switch is set to RUN position (in normal operation). Off: MODE/STOP/RUN switch is set to STOP position (in the IP address display mode).
	CF CARD	Memory card status	Lights green: Memory card is accessible. Blinks green: Memory card is being removed. (RESET/SELECT switch is held to SELECT position.) Off: Memory card is ready to be removed.
	MODE	Operation mode	Lights green: During standard operation Lights orange: During startup in hardware self-diagnostic mode
	ERR.	Error display	Lights red: At the time of occurrence of a battery error Blinks red: During initial startup after purchase During an electric outage due to battery exhaustion
	STA.	Operation status	Blinks green: During startup after the power is turned on Lights green: Startup is completed.
	100M	LAN communication	Lights green: Connected at 100Mbps Off: Connected at 10Mbps
	SD/RD		Lights green: Connected to LAN Off: Not connected to LAN Blinks: LAN communication in progress.
CC-Link communication section	RUN	Operation status of CC-Link communication	Lights green: CC-Link communication section is normally running. Off: CC-Link communication section is under abnormal conditions.
	MST	CC-Link master	Lights green: During normal operation (This LED lights green all the time because the product stays in CC-Link master mode during operation.)
	SD	CC-Link communication status	Blinks green: Transmitting through CC-Link communication
	RD		Blinks green: Receiving through CC-Link communication
	L RUN	CC-Link link status	Blinks green: Linking through CC-Link communication Off: No link through CC-Link communication
	S MST	CC-Link standby master	Off: During normal operation (This light is off all the time because the product stays in CC-Link master mode during operation.)
	L ERR.	Error status of CC-Link communication	Blinks red at regular intervals: The switch on the CC-Link communication section is operated with power on. Blinks red at irregular intervals: Termination resistance is not installed. (The unit or CC-Link dedicated cable is being influenced by noise.) Lights red: The settings don't correspond to the connected equipment.
	ERR	Error status	Lights green: Master stations overlap on the same line. (This equipment is used with fixed CC-Link master mode) The cable is disconnected, or being affected by noise. Blinks red: The station number of the remote station is duplicated.
Contact output section	0 to 9, A to F	Contact output status	Off: Contact output is open. Lights red: Contact output is closed.

◆ LAN interface CH1, CH2 (100BASE-TX/10BASE-T)


Item	Specifications
Communication specifications	Ethernet (10BASE-T/100BASE-TX)
Communication speed	10 Mbps, 100 Mbps
Communication media	UTP (Unshielded twisted pair cable)
Max. segment length	100 m (to hub)

◆ MODE/STOP/RUN switch

Item	Specifications
STOP	Turning the product on or resetting it with the switch in the "STOP" position displays the IP address currently specified for the product. (See "7.2 Checking IP address".)
RUN	Usually use the product with the switch in the "RUN" position.

◆ **RESET/SELECT switch**

Item	Specifications
RES.	Use to reset the product. After you set the switch to the “RES.” position, hear it click, and see all the LEDs except “POWER” on the power supply section go off, return the switch to the central position.
SEL.	Holding the switch to the “SEL.” position during operation stops the reading/writing of the memory card. Make sure to perform this procedure before turning the product off or resetting it.


 <b>Caution</b>	<p>Before turning the product off or resetting it, make sure to hold the RESET/SELECT switch to the “SEL.” position and to see the “CF CARD” LED turn off.</p> <p>If you turn the product off or reset it without performing this procedure, you may lose the data saved in the memory card.</p>
--	--

◆ **CompactFlash memory card slot (server section)**

- Insert the dedicated CompactFlash memory card included in the package when the power is off.
- Always operate the product with the CompactFlash memory card in the slot. If the CompactFlash memory card is not in the slot, the product will not operate.


◆ **Terminal block (power supply section)**

Terminal symbol	Function
ERR	Not used
FG	Frame ground
LG	Power filtering ground
L	Power supply 100 to 240 V AC
N	



◆ **Terminal block (CC-Link communication section)**

Terminal symbol	Function
DA	CC-Link communication line A
DB	CC-Link communication line B
DG	CC-Link communication line ground
SLD	CC-Link communication line shield
NC	Not used

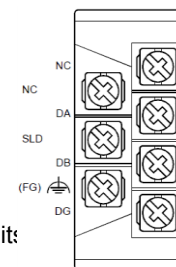


Both ends of the shield line for CC-Link dedicated cable should be connected to “SLD” of the unit. Perform D-type (Type 3) grounding work dedicated for the “FG” terminal of each unit. “SLD” and “FG” are connected together inside each unit.

◆ **CC-Link station number setup switch (CC-Link communication section)**

- Set (Hold) the switch to 0.

(Note) It is set to 0 when shipped from the factory. Do not change the setting. If it is set to any position other than 0, CC-Link communication cannot be conducted.

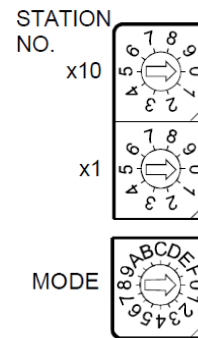

◆ **CC-Link communication speed setup switch (CC-Link communication section)**

Setting	Communication speed
0	156 kbps
1	625 kbps
2	2.5 Mbps
3	5 Mbps
4	10 Mbps
5 to 9, A to F	Prohibited

(Note 1) Set to the same communication speed all the CC-Link terminals connected to the product. If they operate at different communication speeds, communication cannot be conducted.

(Note 2) The switch is set to 0 (communication speed = 156 kbps) when shipped from the factory.

◆ **Terminal block (contact output section)**

Terminal symbol	Function
0 to 9, A to F	Contact relay output 0 to 9, A to F (100 to 240 V AC or 24 V DC)
COM	Contact relay output common (common for output 0 to 9, A to F)
NC	Not used

## 4. Procedures for Installation and Setting

### ■ Installation

The following explains the operations from package opening to installation.

- (1) Open the package.
- (2) Check the packaged contents.  
(See "Packaged contents" on page 1 of this instruction manual.)
- (3) Insert the supplied memory card into the memory card slot.
- (4) Connect the battery mounting connector.  
(See "6.1 Installing battery" of this instruction manual.)
- (5) Check that the CC-Link station number setup switch is set to "0".  
(See "CC-Link station number setup switch" in "3. Name and Function of Each Part" of this instruction manual.)
- (6) Set a communication speed using the CC-Link communication speed setup switch.  
(See "CC-Link communication speed setup switch" in "3. Name and Function of Each Part" of this instruction manual.)
- (7) Install this product.  
(See "5. Main Unit Installation" of this instruction manual.)
- (8) Conduct wiring.  
(See "8. Connection Diagram" of this instruction manual.)
- (9) Check wiring conducted in step (8).

This completes the installation procedure.



#### Caution

- Read "Precautions concerning the installation" carefully to perform the operation safely.
- If the product gives off abnormal noise, smell, smoke or heat, turn the power off immediately.

### ■ Setting

The following explains the preparation for operating the product after it is installed.

- (1) Use the supplied CD to install the setting software on your PC.  
(See "2.3 Installation of the software" in User's Manual – Setting.)
- (2) Use the configuration software to set an IP address for the product.  
(See "7. IP Address Setting" of this instruction manual.)  
\* When you use the factory default setting (192.168.10.1 for IP address), you do not have to perform this step.
- (3) Use the configuration software to set a date and clock for the product.  
(See Instruction Manual–Setting.)
- (4) Configure client computers to your network environment.  
For details on settings, contact your network administrator.  
For details on setting procedures, see the instruction manual of your computer or contact its manufacturer.
- (5) Configure the web browsers in the client computers.  
(See Instruction Manual– Operation.)
- (6) Set necessary information such as connected devices and measuring points.  
(See Instruction Manual–Setting.)
- (7) Check the product operation.  
(See Instruction Manual– Operation and Setting.)



#### Caution

- Wrong network settings may cause other devices on the network to malfunction.
- The factory settings for this product are as follows: 192.168.10.1 for the IP address, 255.255.255.0 for the subnet mask, and no gateway setting.  
When you connect the product directly to a single PC, you do not have to change these settings.

## 5. Main Unit Installation(Installation de l'unité principale)


This product can be installed in two ways, installation on an IEC rail (35 mm wide) and direct installation on a board.  
(Le produit peut être installé au deux moyens, installation sur un IEC rail (35 mm de large) et installation directe sur une planche.)

### 5.1 Installation on IEC rail (35 mm wide)(Installation sur un IEC rail (35 mm de large))

#### 5.1.1 Mounting IEC rail mounting adaptor

##### (Montage d'adaptateur pour monter sur IEC rail)

Mount the supplied IEC rail mounting adaptors (small x 2 and large x 1) on the back of the main unit.  
(Montez adaptateurs pour monter sur IEC rail (petits x 2 et grand x 1) sur le dos de l'unité principale.)

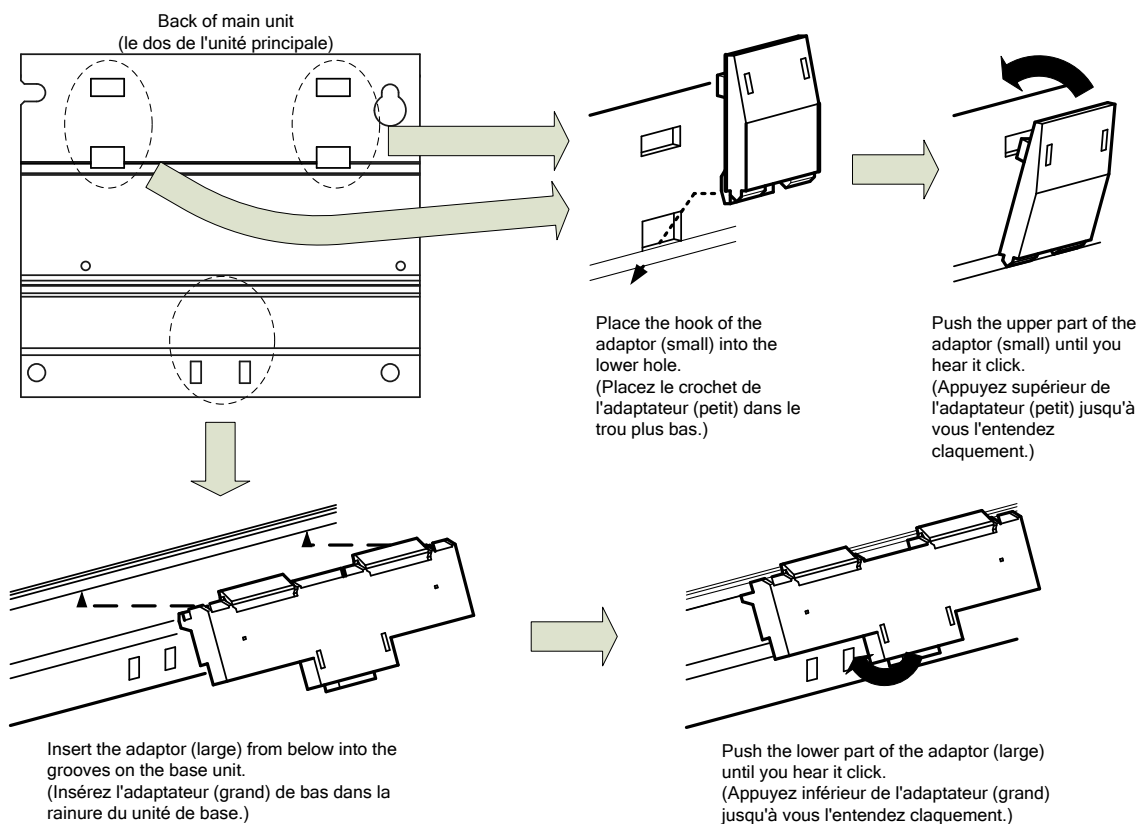


## 5.1.2 Mounting IEC rail fixing square washer

### (Montage de rondelle carrée pour fixer IEC rail)


Use square washers and mounting screws (M5 × 10) to fix the IEC rail to the position where the main unit will be installed.

(Utilisez rondelles carrées et bornes de montage (M5 × 10) pour fixer l'IEC rail dans la position où l'unité principale sera installée.)

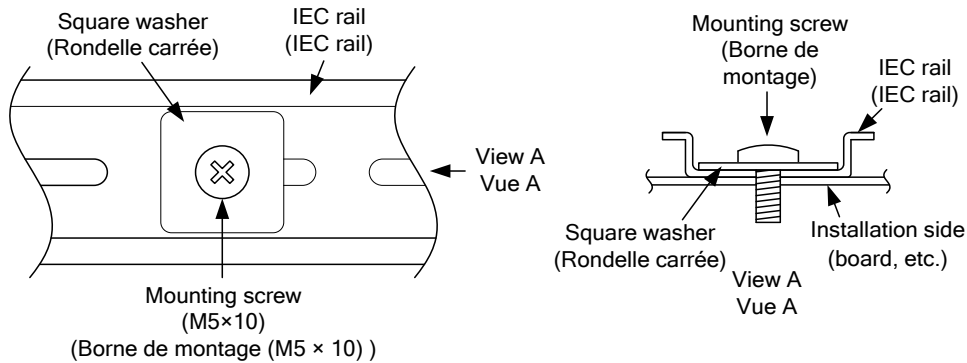


Keep 80 to 90 mm between the square washers.

(Maintenez de 80 à 90 mm entre des rondelle carrées.)

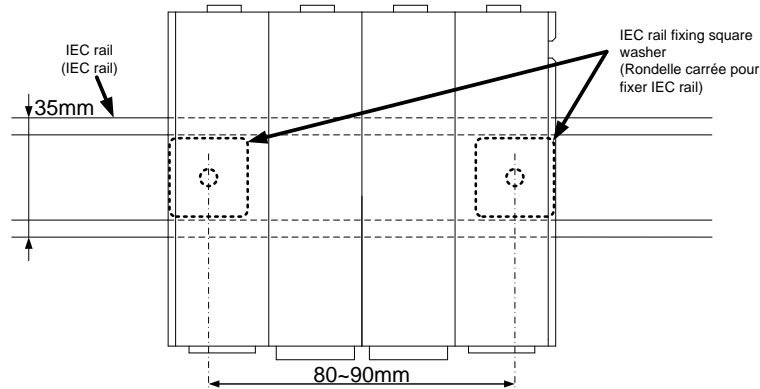


### Point

Make sure to place the square washers parallel to the IEC rail.  
(Assurez-vous à placer des rondelle carrées en parallèle de l'IEC rail.)

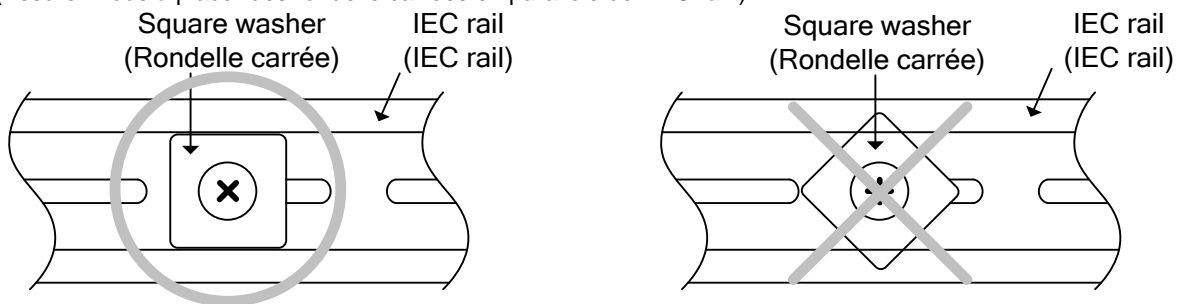


## 5.1.3 Installing main unit on IEC rail (Installation de l'unité principale sur IEC rail)

Hook the adaptor into the IEC rail.  
(Accrochez l'adaptateur à l'IEC rail.)

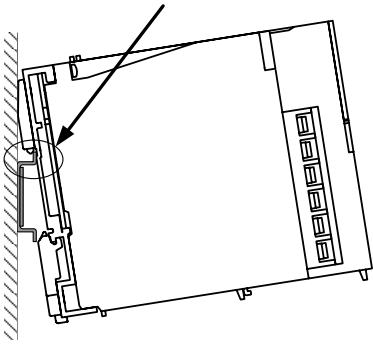

Push the lower part of  
the main unit until you  
hear it click.  
(Appuyez inférieur de  
l'unité principale jusqu'à  
vous l'entendez  
claquement)

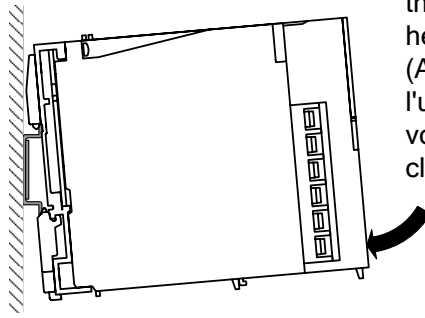





## 5.1.4 Fixing main unit(Fixation de l'unité principale)

To prevent vibration when you transport the product installed on a board, make sure to fix the product using IEC rail fixing metal brackets.

- (1) Loosen the screw on the top of the fixing metal bracket.  
(Desserrez le vis au sommet de ferrure en métal de fixation.)

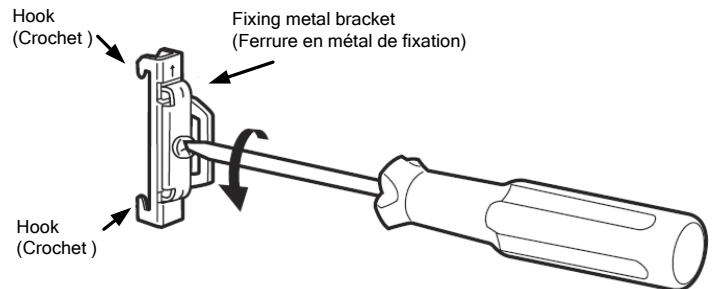


- (2) Place the lower hook of the fixing metal bracket into the lower side of the IEC rail.  
(Placez le crochet inférieur de ferrure en métal de fixation en bas de l'IEC rail.)

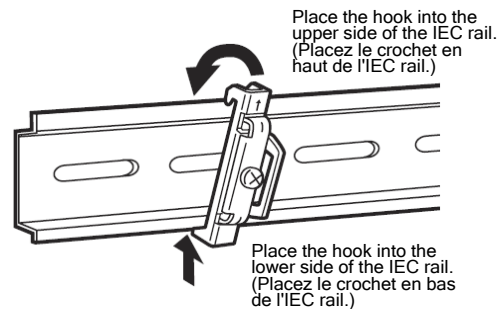

- (3) Place the upper hook of the fixing metal bracket into the upper side of the IEC rail.  
(Placez le crochet supérieur de ferrure en métal de fixation en supérieur de l'IEC rail.)

- (4) Slide the fixing metal bracket to come into intimate contact with the main unit, and tighten the screw on the top with a screwdriver.  
(Tightening torque: 1.00 to 1.35 N·m)  
(Glissez la ferrure en métal de fixation pour toucher étroitement à l'unité principale, et serrez le vis supérieur avec un tournevis.  
(Couple de serrage: 1.00 à 1.35 N·m))

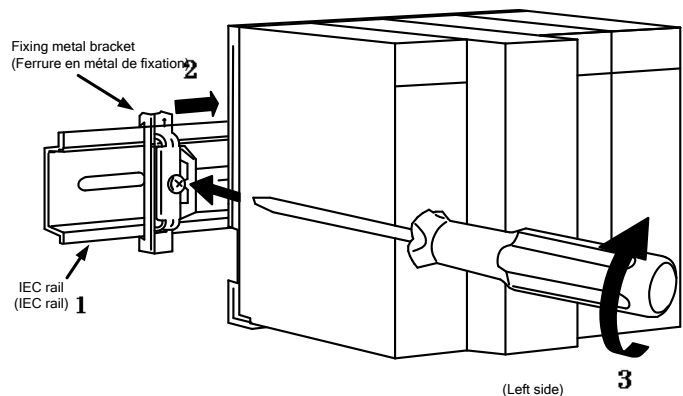

Follow (1) to (3)


- (1) Fix the DIN rail
- (2) Move the fixing metal bracket to the main body
- (3) Loosen the fixing metal bracket

Suivez de (1) à (3)

- (1) Fixer le DIN rail
- (2) Mettre la ferrure en métal de fixation à l'unité principale
- (3) Desserre la ferrure en métal de fixation

- (5) Check that the right and left fixing metal brackets are secured to the IEC rail.  
(Vérifiez que la ferrures en métal de fixation en droite et gauche sont fermement attachées à l'IEC rail.)

- (6) Check that the right and left fixing metal brackets are secured to the IEC rail.  
(Vérifiez que la ferrures en métal de fixation en droite et gauche sont fermement attachées à l'IEC rail.)

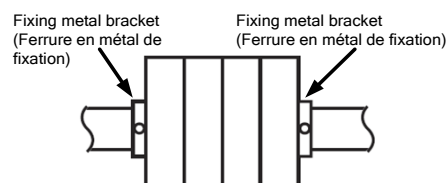


## 5.2 Direct installation on board(Installation directe une planche)


### Cautions

- **Please return the unit which you removed for wiring. The units are only support to be worked as EcoWebServerIII.**  
**It will be not worked without using for EcoWebServerIII.**
- **Please do not replace for any unit of EcoWebServerIII. Operation verification of EcoWebServerIII is confirmed as the purchase. It may cause a malfunction or failure if EcoWebServerIII is used in any other combination.**


- (1) Undo the fixing screws on the top of the unit for the power supply section and the unit for the contact output section.  
(Déboutonnez les vis pour fixation l'unité qui sont supérieurs de l'unité pour la section d'alimentation électrique et de l'unité pour la section de contact sortie.)

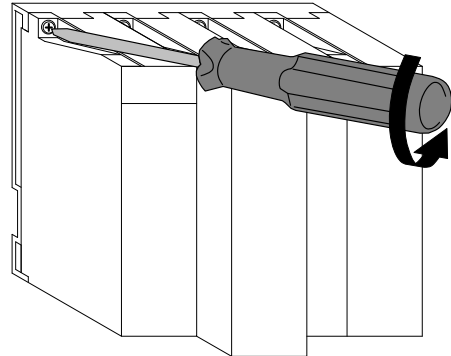


- (2) Remove the unit for the power supply section and the unit for the contact output section.  
(Retirez l'unité pour la section d'alimentation électrique et de l'unité pour la section de contact.)

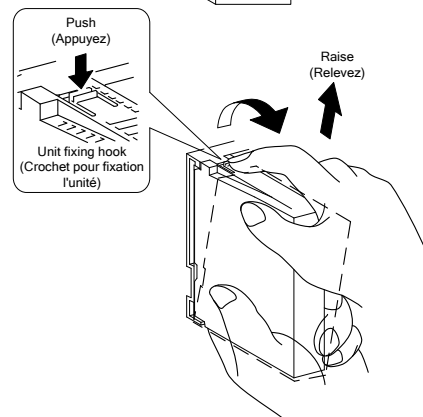


- (3) Mount two board mounting screws (M4 x 12) on the board to fix the upper side of this product.  
(Montez deux bornes de montage (M4 x 12) sur la planche pour fixer le côté supérieur du produit.)

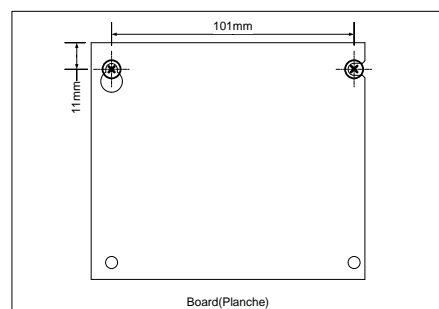

- (4) Hook the notch in the right side of this product on the right screw.  
(Crochez le cran du côté droite du produit sur le vis droite.)

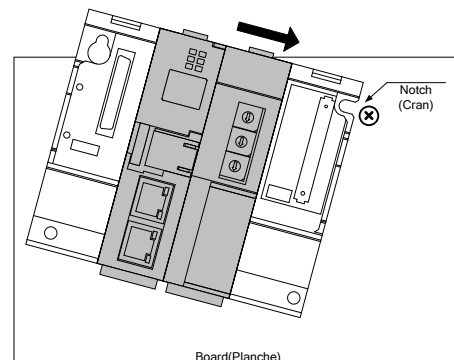


- (5) Hook the hook slot in the left side of this product on the left screw.  
 (Crochez le cran du côté gauche du produit sur le vis gauche.)

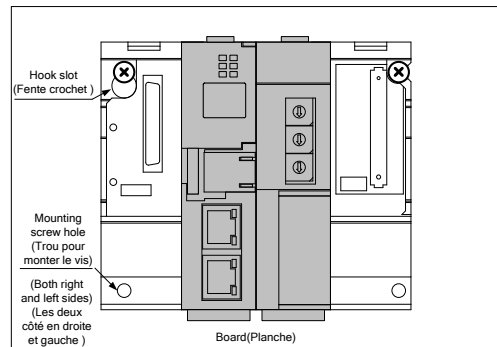


- (6) Place mounting screws into the right and left screw holes in the lower side of this product, and tighten all the mounting screws.  
 (Placez deux bornes de montage dans les trous de vis (en droite et gauche) en bas du produit et serrer toute les bornes de montage.)

- (7) Mount the unit for the power supply section and the unit for the contact output section.  
 (Montez l'unité pour la section d'alimentation électrique et l'unité pour la section de contact de sortie.)

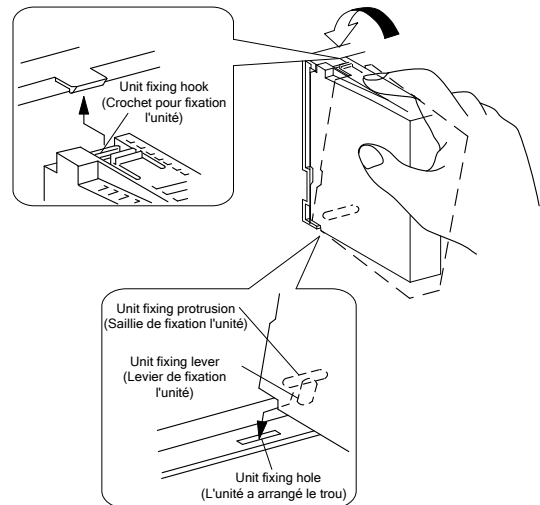

- (8) Tighten the unit fixing screws on the top of the unit for the power supply section and the unit for the contact output section. (Tightening torque: 0.36 to 0.48 N·m)  
 (Serrez les vis pour fixation l'unité au sommet de l'unité pour la section d'alimentation électrique et de l'unité pour la section de contact de sortie. (Couple de serrage: 0.36 à 0.48 N·m))

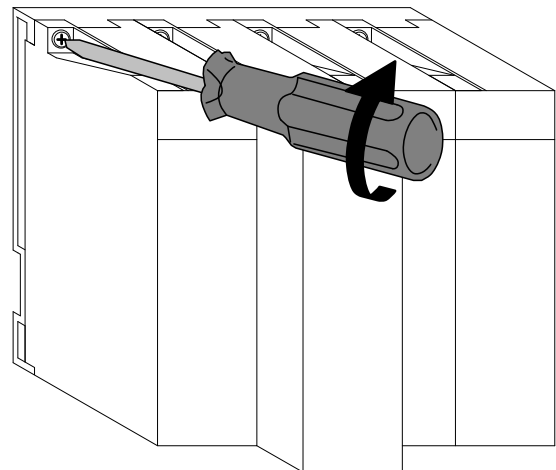


## 6. Battery Installation and Replacement

### 6.1 Installing battery

This product is shipped with the battery connector removed. Before use, make sure to connect the battery connector.


- (1) Open the battery cover on the bottom of the product.
- (2) Check that battery is properly installed.
- (3) Insert the connector on the battery into the case side connector pin in the right direction.

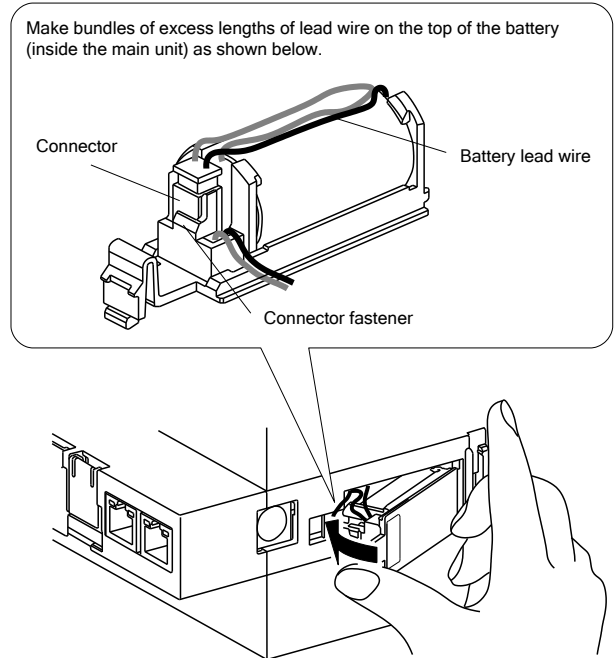

### 6.2 Replacing battery

When the battery reaches its end of life, the "ERR." LED on the server section lights red. Replace the battery with a new one. (See "11. Options" of this instruction manual.)

- (1) Open the front cover on the server section, and hold the RESET/SELECT switch to the SEL position.
- (2) When the "CF CARD" LED goes out, turn this product off.
- (3) Open the battery cover on the bottom of the server section.
- (4) Remove the battery from the holder.
- (5) Insert a new battery into the holder in the right direction and connect the lead connector to the connector.
- (6) Close the battery cover.
- (7) Turn this product on.

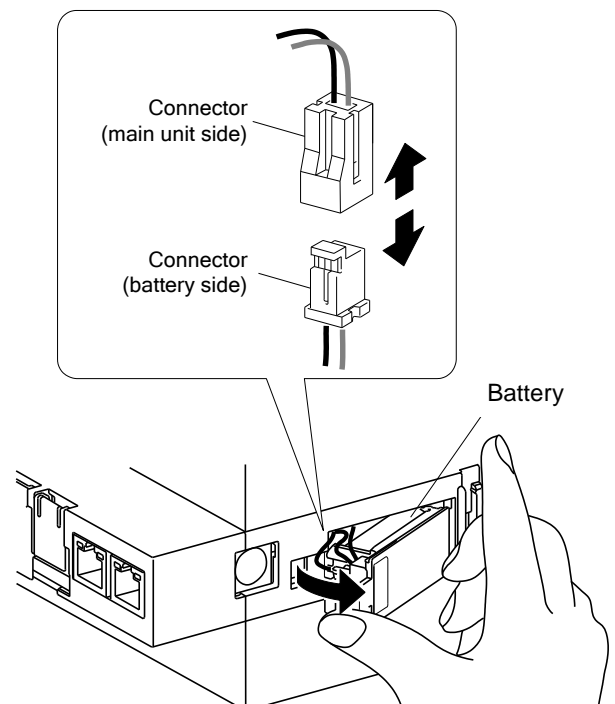

#### Caution

- Make sure to perform battery replacement with electricity off.
- Perform battery replacement within 3 minutes. If 3 minutes passes with the battery removed, the data for the last 1 hour and the clock setting may be initialized. (The data and setting values older than those for the last 1 hour are not initialized.) If the IP address and clock settings are initialized, reconfigure those settings after backing up the data.

## 7. IP Address Setting

### 7.1 Setting IP address

- (1) Install setting software to computer.
- (2) Connect this product via a LAN straight cable or crossover cable to a PC that has the configuration software installed in it.
- (3) Take a note of the IP address set in the PC.

PC's IP address	:	<input type="text"/>
PC's subnet mask	:	<input type="text"/>
PC's default gateway	:	<input type="text"/>



- (4) Change the IP address set in the PC according to the IP address (factory setting: 192.168.10.1) set in the product.

IP address set in the product	IP address to be set to the PC
192.168.10.1	192.168.10.xx xx is a value from 2 to 254. * The upper 3 digits should be consistent with those for the product.

- (5) Use the setting software to set an IP address for EcoWebServer III. Launch the EcoWebServerIII setting software.


[Start menu] > [All Programs] > [Mitsubishi Energy Saving Management Assistance] > [EcoWebServer III (MES3-255C-EN)]

> Click [Model: MES3-255C-EN Configuration Software ver3].

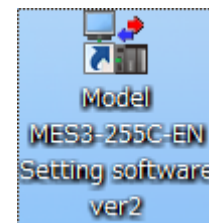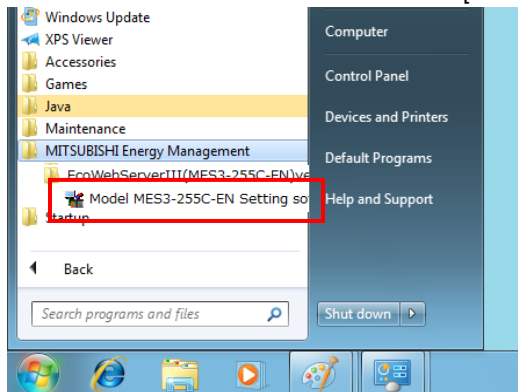


You can also launch the configuration software by double-clicking the **Model: MES3-255C-EN Setting Software ver3** icon on the desktop.

After a few seconds, the following project management window appears.

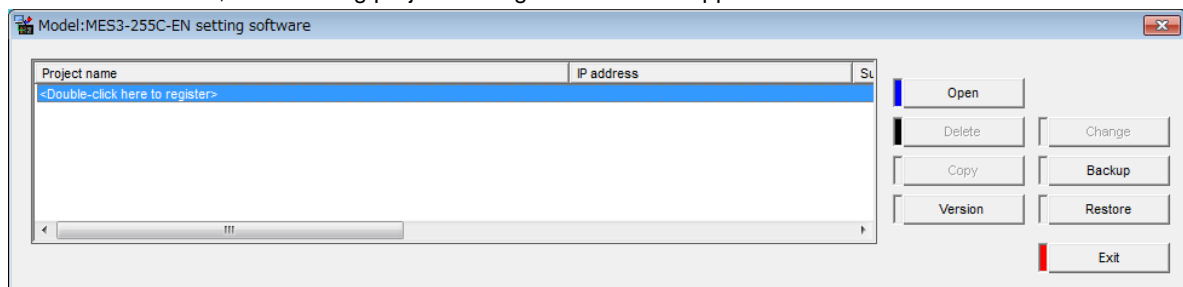

\* If you are using Windows 7 and the **User Account Control** dialog box appears as shown below, Click **Yes** to launch the configuration software.

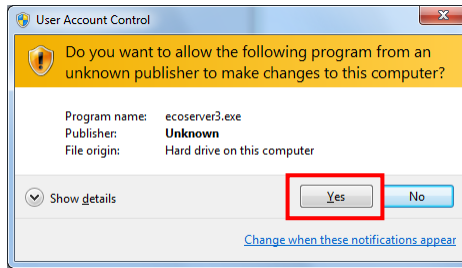


(6) Create a new project.

Double-click **<Double-click here to create a new project.>** in the project management window.

Or


Select **<Double-click here to create a new project.>** and click **Open**.

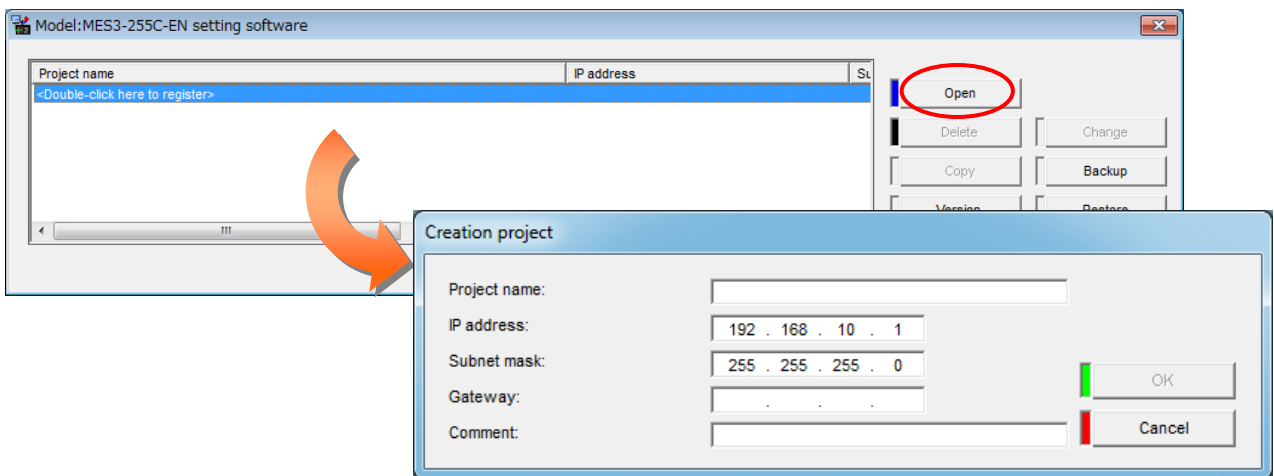


Configure the following settings in the **Create New Project** window and click **OK**.

Project name	Optional (Specify a name such as "Factory A" or "Floor B" so that you can recognize it as a project for EcoWebServer III.)
IP address	192.168.10.1 (Specify the factory default IP address.)
Subnet mask	255.255.255.0
Default gateway	Left blank
Comment	Optional

- (7) Change the IP address for EcoWebServer III. Click Options in the project configuration window. Click **IP address** in the tree menu.

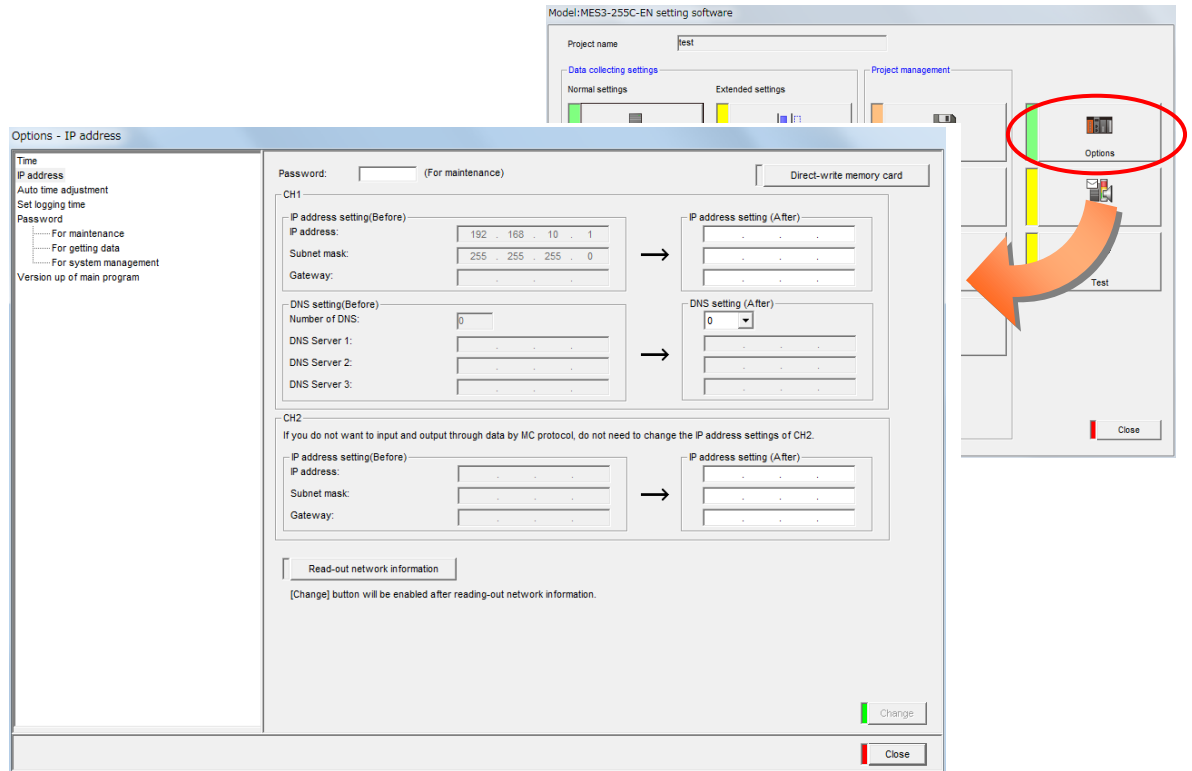


- (8) Clicking the button displays the network information read confirmation message.

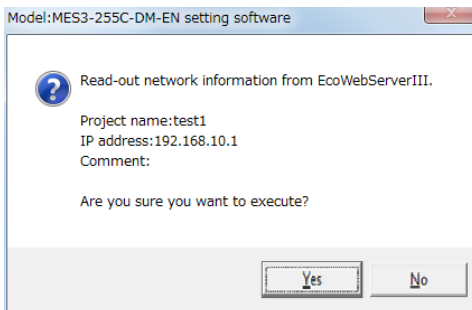


[Yes]: Executes network information reading.

[No]: Cancels network information reading..


After reading is completed, the message below is displayed. Click **OK**.

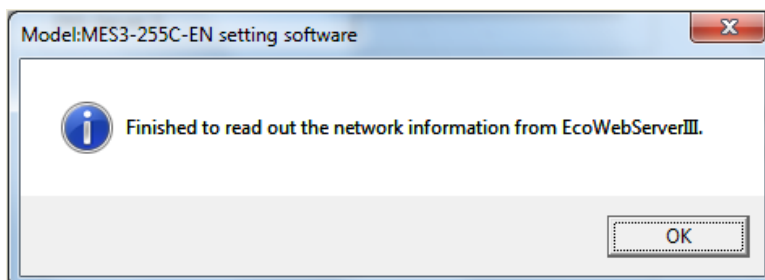


The network information currently set in EcoWebServer III is reflected to the IP address setting (Before) and IP address setting (After) in CH1 and CH2.

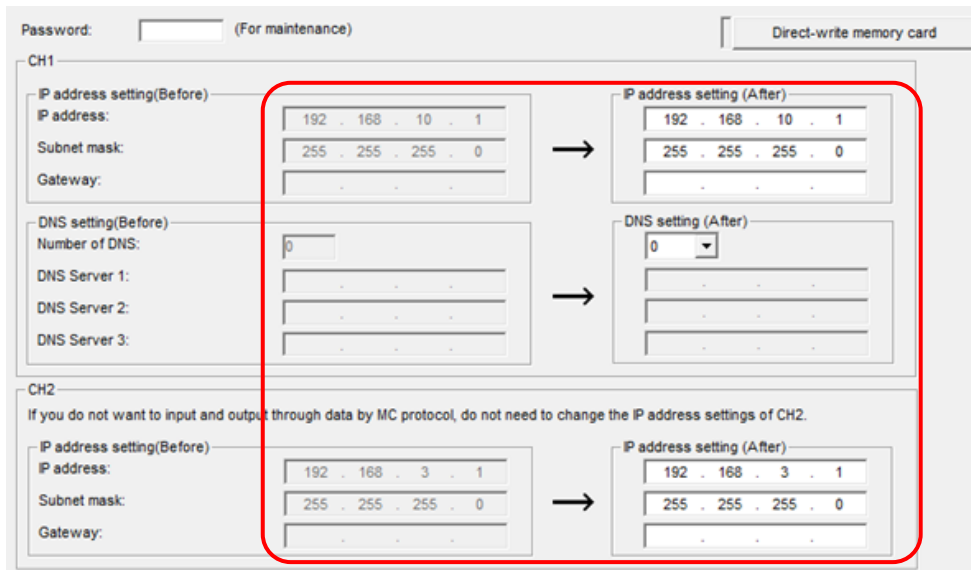


- (9) Change the IP address in IP address settings (new).  
 (The following figure shows an example of changing the IP address to 10.123.234.10. Type an IP address, subnet mask, and default gateway to be used for operation.)

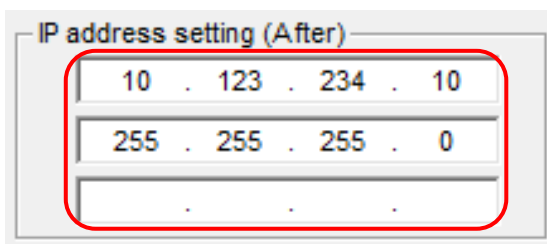


- (10) Type a maintenance password (factory default: **ecopass**) in **Password** and click **Apply**.

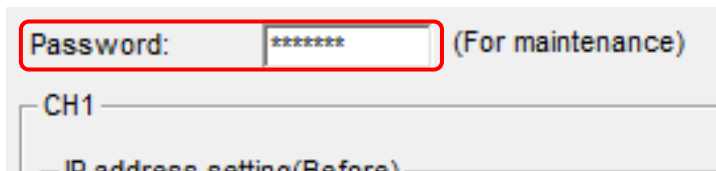

In the confirmation dialog box that appears after you click **Change**, click **Yes**.

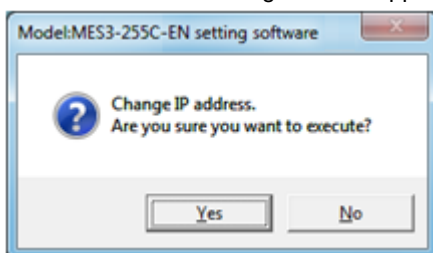

When the IP address configuration is complete, the following dialog box appears. Click **OK**.

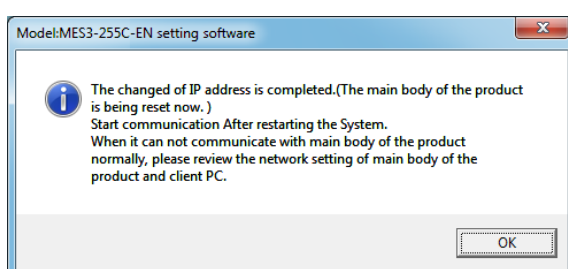




- \*1 After the IP address configuration is complete, EcoWebServer III is automatically reset. (After it is reset, the new IP address settings take effect.)
- \*2 Resetting takes 1 to 8 minutes to complete. Check to see that resetting is complete and the "STA." LED on the EcoWebServer III main unit turns on before starting communications.
- \*3 The values of **IP address**, **Subnet mask**, and **Default gateway** in the project information are also automatically updated with the new values.


(11) After changing the IP address for the product, return the PC's IP address to its original address.

## 7.2 Checking IP address

- (1) Open the front cover on the server section, and set the MODE/STOP/RUN switch to the "STOP" position.
- (2) Hold the RESET/SELECT switch to the "SEL." position.
- (3) After the "CF CARD" LED turns off, turn the RESET/SELECT switch to the "RES." position.
- (4) After all the LEDs except the "POWER" LED on the power supply section turn off, return the RESET/SELECT switch to the central position.
- (5) Wait until the product starts up and the IP address is displayed on the 7-segment LED at the front.

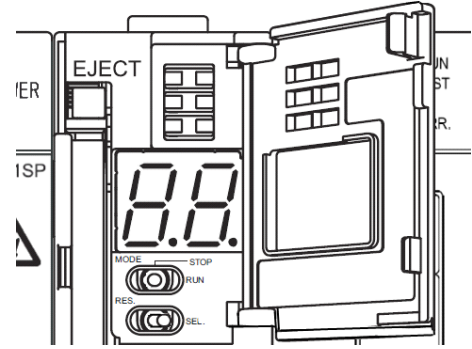


IP address display (Display example of 192.168.10.1 set in the product)

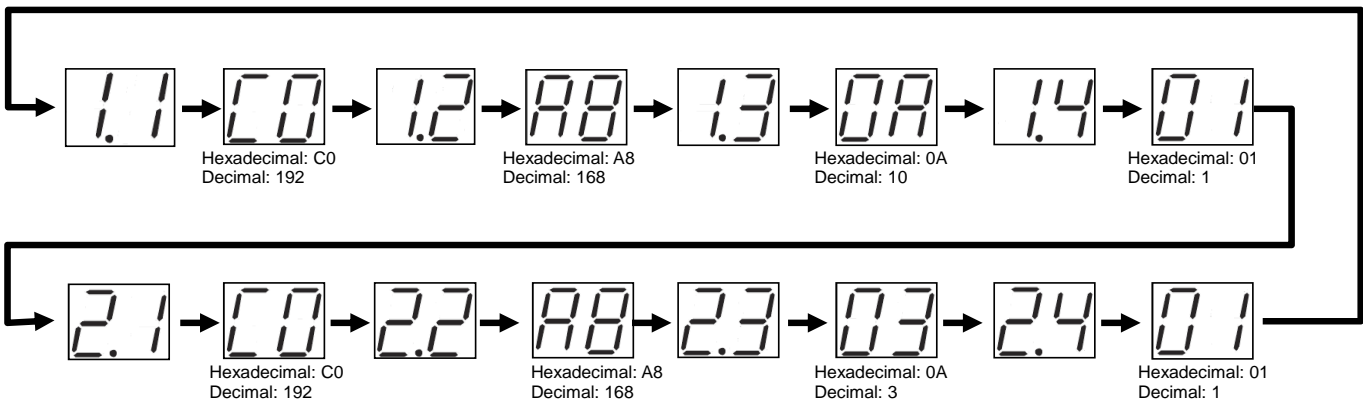

- (6) After you finish checking the IP address, turn the MODE/STOP/RUN switch to the "RUN" position.

## 8. Connection Diagram

### 8.1 Power supply section(Section de l'alimentation électrique)

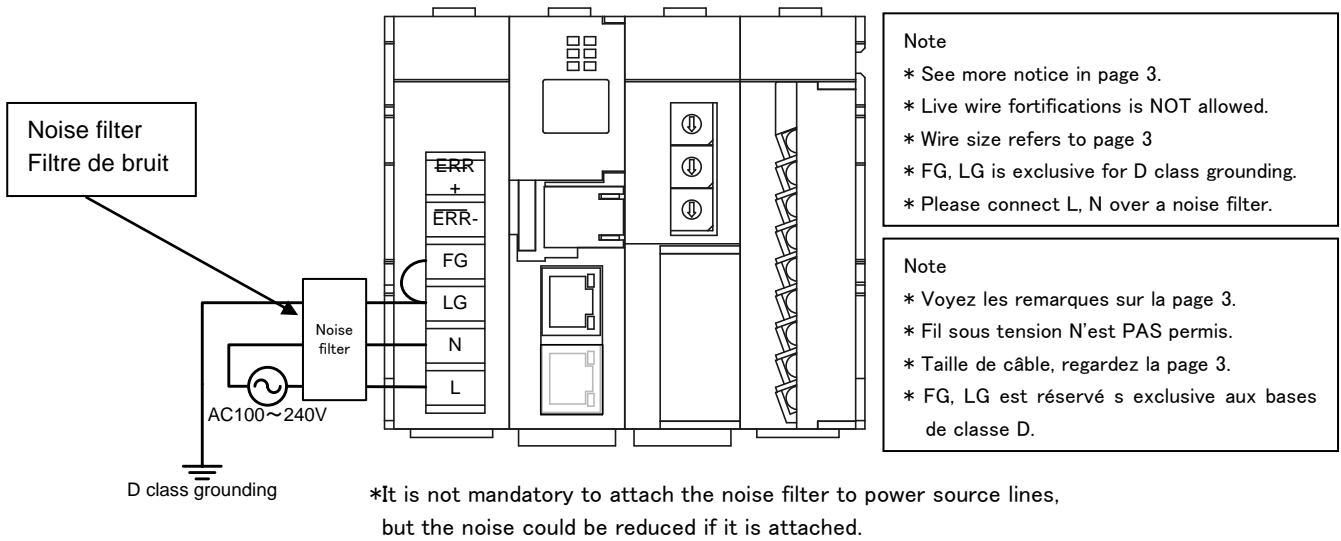

<Recommended Model>

Model Name : FN343-3/01 (Rated Current: 3A)


Supplier : SCHAFFNER

Software and data of EcoWebServerIII is being saved in compact flash card.


It might cause data corruption by a power failure or an instant power. Please consider UPS if the power failure is frequently occurred. Please confirm the content to turn off EcoWebServerIII for a maintenance, Procedure refers to [Names and functions of parts].

### 8.2 Ethernet communication section(Section de communication Ethernet)

#### 8.2.1 For initial setting (IP address setting) (Pour les réglages initiaux (adresse IP fixation))

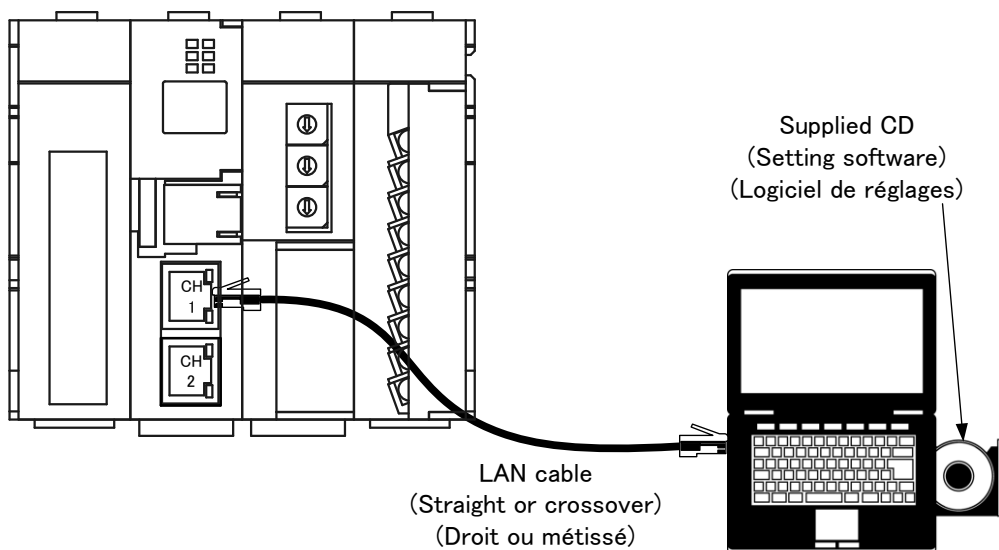


8.2.2 For operation(Pour opération)

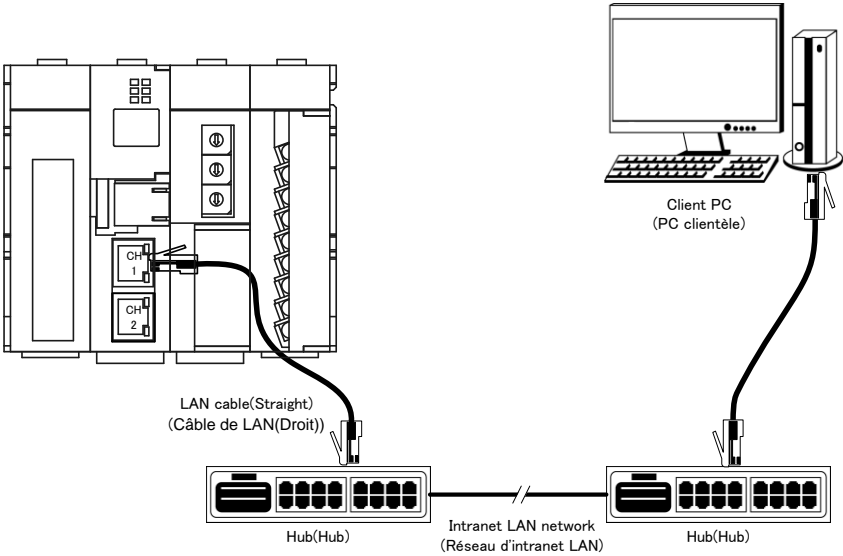

## 8.3 Ethernet communication section (CH2 to PLC) (Section de communication Ethernet (CH2))

### 8.3.1 For operation(Pour opération)

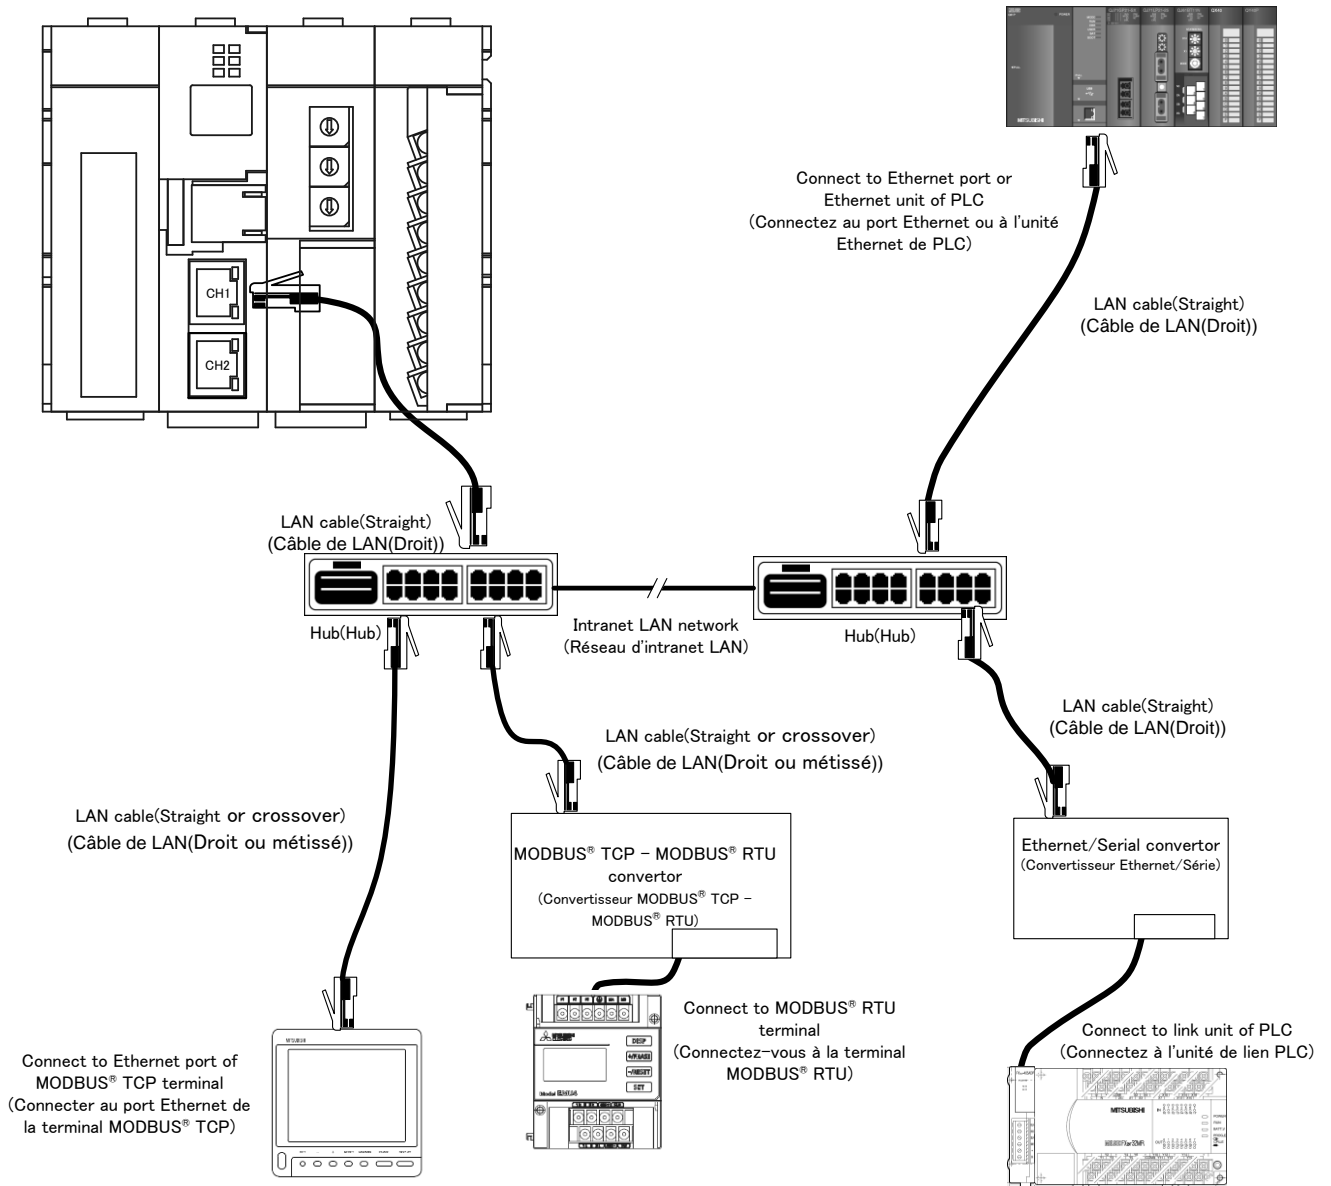

\*Please see the details in PLC's instruction manual.

(\*Voyez le mode d'emploi de PLC en détail.)


\*FX series PLC is only supported for serial communication by using Ethernet/Serial converter.

(\*Série FX est seulement soutenue pour la communication en série au moyen de convertisseur Ethernet/Série.)

\*About the Ethernet/Serial Converter, we have check operation with "LINE EYE SI-65".

\* Operation of MODBUS<sup>®</sup> TCP – MODBUS<sup>®</sup> RTU convertor model that has been functionally verified is LINE EYE SI-485MB.


## 8.4 CC-Link communication section(Section de CC-Link communication)

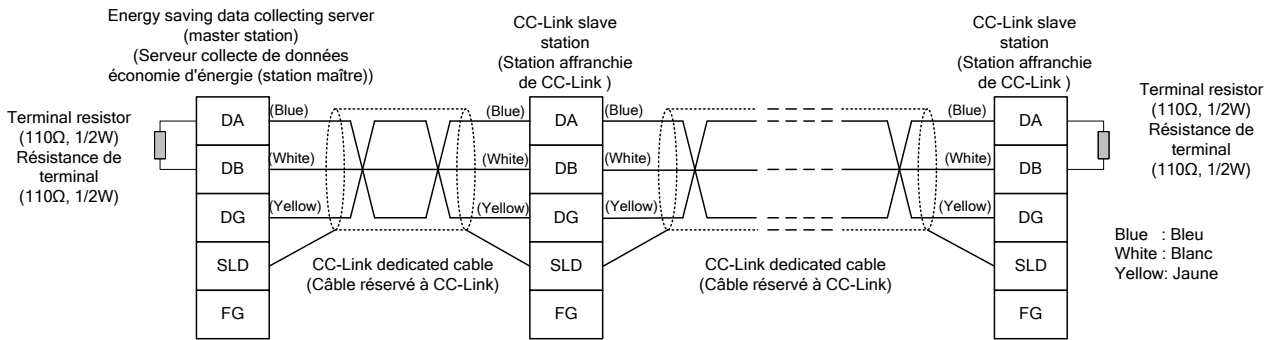


### Point

The maximum transmission distance depends on the CC-Link communication speed setting.  
(Distance de transmission maximale compte sur la fixation de la vitesse de communication.)  
Perform wiring according to the following table so that it will not exceed the maximum transmission distance.  
(Réalisez le câblage selon la table suivante afin qu'il n'excède pas la distance de transmission maximale.)

Communication speed (Vitesse de la communication)	156 kbps	625 bps	2.5 Mbps	5 Mbps	10 Mbps
Cable length between stations (Vitesse de la communication)	20 cm or longer (20 cm ou plus)	20 cm or longer (20 cm ou plus)	20 cm or longer (20 cm ou plus)	20 cm or longer (20 cm ou plus)	20 cm or longer (20 cm ou plus)
Max. transmission distance (Distance de transmission maximale)	1200 m	900 m	400 m	160 m	100 m

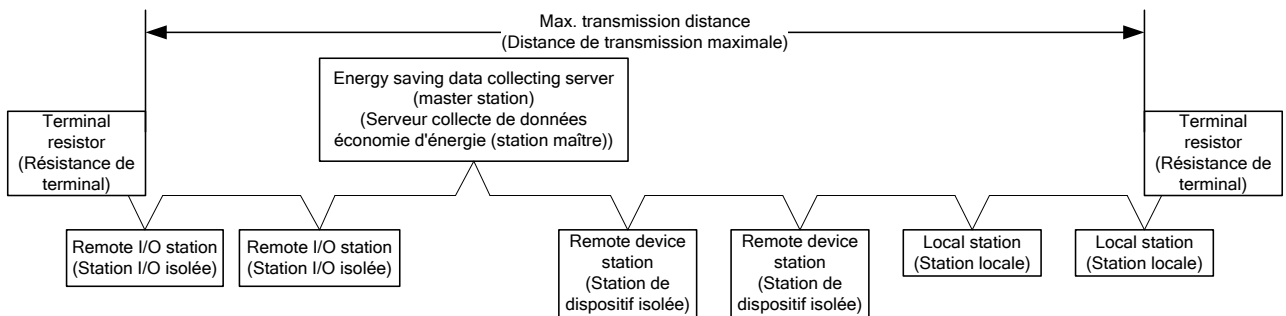

## 8.5 Contact output section(Section de sortie contact)

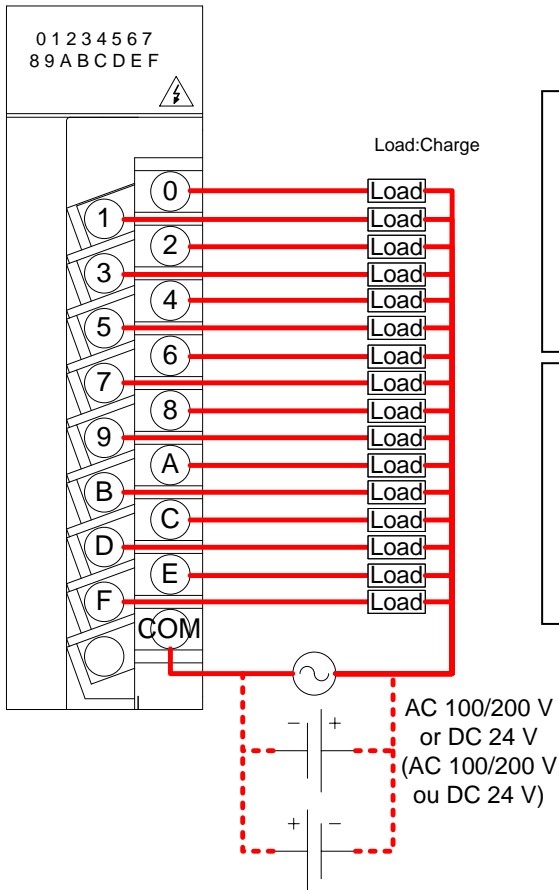

### Note

- \* See more notice in page 3.
- \* To prevent induction noise, keep control lines and communication cables as far away from power lines as possible.
- \* Wire size refers to page 3.
- \* Terminals are arranged by the guests when COM is connected to several points.

### Note

- \* See more notice in page 3.
- \* Pour empêcher le bruit d'induction, écartez les lignes de contrôle des lignes électriques autant que possible.
- \* Taille de câble, regardez la page 3.
- \* Si COM sera connecté aux points plusieurs, terminaux doit être disposé par client.

Terminal symbol	Function
0 to 9, A to F	Contact relay output 0 to 9, A to F (100 to 240 V AC or 24 V DC)
COM	Contact relay output common (common for output 0 to 9, A to F)
NC	Not used


### Point

When a counter or timer that uses a DC-DC converter is connected as a load, its inrush current should be below the maximum load current of the contact output section.

(Si l'un compteur ou chronomètre ce qu'il utilise un DC-DC transformateur sera connecté comme une charge, le courant d'afflux doit être inférieur au courant de charge maximum de la section de contact de sortie.)

If the inrush current is large, perform any one of the following to reduce the impact of the inrush current.

(Si le courant d'afflux est grand, réalisez l'un des suivants pour diminuer l'impact du courant d'afflux.)

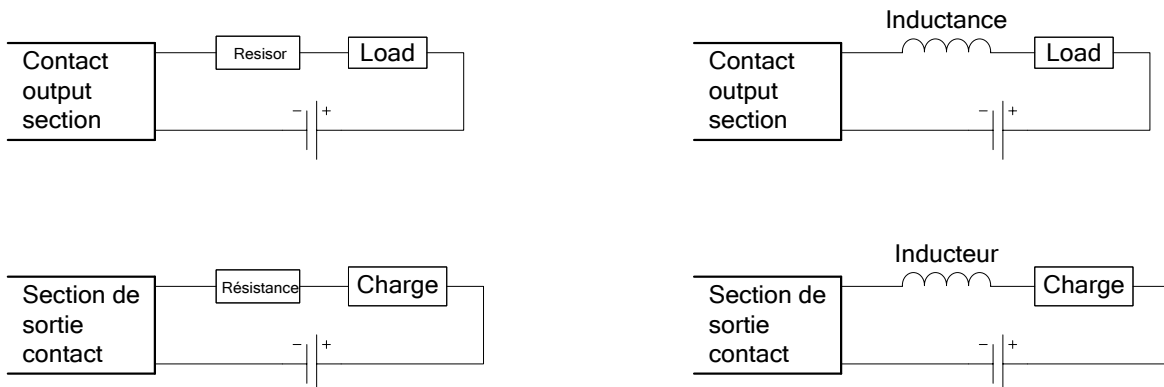

## 9. Specifications

### 9.1 Hardware specifications

Item		Specifications						
Power supply section	Input power supply (Entrée d'alimentation électrique)	AC 100 to 240 V (+10%, -15%)						
	Input frequency (Fréquence d'entrée)	50/60 Hz (±5%)						
	Input voltage distortion (Distorsion)	Within 5%						
	Consumption VA (Consommation VA)	19 VA (at AC 110 V), 25 VA (at AC 220 V)						
	Inrush current (Courant d'afflux)	20 A, 8 ms or less(20 ms ou moins (100 V AC ou plus))						
	Allowable momentary power interruption time	20 ms or less (100 V AC or higher)						
	Withstand voltage	L,N terminals – external case					AC 2,210V in 5 seconds	
		L,N terminals – output terminals						
		L,N terminals – CC-Link communication terminals						
	Insulation resistance	L,N terminals – external case					10 MΩ at DC 500 V	
		L,N terminals – output terminals						
		L,N terminals – CC-Link communication terminals						
	Noise immunity	<ul style="list-style-type: none"> <li>• By noise simulator with a noise voltage of 1500 Vp-p, a noise width of 1 μs and a noise frequency of 25 to 60 Hz</li> <li>• Noise voltage IEC61000-4-4, 2 kV</li> </ul>						
	Operating ambient temperature	0 to 55°C						
	Storage ambient temperature	-25 to +75°C						
	Operating ambient humidity	5 to 95% RH						
	Storage ambient humidity	5 to 95% RH						
	Vibration resistance	Conforming to JIS B 3502, IEC 61131-2	-	Frequency	Constant acceleration	Half amplitude	Sweep count	
			Intermittent vibration	5 to 9 Hz	-	3.5 mm	10 times in each X, Y, Z direction	
				9 to 150 Hz	9.8 m/s <sup>2</sup>	-		
			Continuous vibration	5 to 9 Hz	-	1.75 mm	-	
9 to 150 Hz	4.9 m/s <sup>2</sup>	-						
Impact resistance	Conforming to JIS B 3502, IEC 61131-2 (147 m/s <sup>2</sup> , 3 times in each XYZ direction)							
Operating environment	No corrosive gas							
Operating altitude	2000 m or below							
Installation area	Inside a board							
Overvoltage category (*1)	II or below							
Contamination level (*2)	2 or below							
Mass	0.9 kg							
Fuse	Built-in (unchangeable by user)							
ERR terminal	Application	Off when no power is input, the product is reset, or fuse blows						
	Rated switching voltage/current	24 V DC, 0.5 A						
	Min. switching load	5 V DC, 1 mA						
	Life	Mechanical: 20,000,000 times or more, electrical: 100,000 times or more (at rated switching voltage/current)						
Server section	Ethernet	Interface	10BASE-T/100BASE-TX					
		Transmission method	Baseband					
		Cascade connection limit	Max. 4 levels (10BASE-T), Max. 2 levels (100BASE-TX)					
		Max. segment length	100 m					
		Compatible Connector	RJ45					
	Protocol	LAN CH2 (MC protocol)	client	Autonegotiation (10BASE-T/100BASE-TX automatically detected) Auto MDIX function (straight/crossover cable automatically detected)				
				HTTP (view by web browser), FTP (read time, file transfer), SMTP (send mail), SNTP (set time)				
			Server(*3)	Ethernet direct: QnA compatible 3E frame (ASCII) Ethernet / Serial conversion time: A compatible 1C frame format 4 (ASCII)				
				3 E frame (binary) / 4 E frame (binary)				
Clock accuracy	0 to 55°C	Per day: -10.89 to +8.64 sec		Additional difference of ±0.5 seconds can be produced during outages.				
	25°C	Per day: -4.32 to +5.25 sec						
Backup for electric blackout (*4)	Backup data	Backup is made using the battery. <ul style="list-style-type: none"> <li>• Clock</li> <li>• Measurement data for the last 1 hour</li> </ul> Backup is made using nonvolatile memory card. <ul style="list-style-type: none"> <li>• Setting values</li> <li>• Measurement data except the one for the last 1 hour</li> </ul>						
Battery	Type	Lithium manganese dioxide primary battery						
	Initial voltage	3.0 V						
	Nominal current	1800 mAh						




Item		Specifications		
	Life when in storage	5 years at room temperature (actual service value)		
	Life when in use	Energization time ratio	Guaranteed value	Guaranteed time after battery error occurs
		0%	13,700 hours, 1.57 years	600 hours, 25 days
		30%	19,100 hours, 2.18 years	
		50%	25,800 hours, 2.96 years	
		70%	40,000 hours, 4.57 years	
100%	43,800 hours, 5 years			
CC-Link communication section	Transmission speed	156 kbps / 625 kbps / 2.5 Mbps / 5 Mbps / 10 Mbps		
	Max. overall cable length (Max. transmission distance)	Communication speed	Cable length between stations	Max. overall cable length
		156 kbps	20 cm or longer	1200 m
		625 kbps		900 m
		2.5 Mbps		400 m
		5 Mbps		160 m
	10 Mbps	100 m		
	Max. number of connected units	64 units under the following conditions.		
		1. Total number of stations		
		$a + b \times 2 + c \times 3 + d \times 4 \leq 64$		
		a: Number of units occupying 1 station, b: Number of units occupying 2 stations, c: Number of units occupying 3 stations, d: Number of units occupying 4 stations		
		2. Number of connected units		
		$16 \times (A + D) + 54 \times B + 88 \times c \leq 2304$		
	A: Number of remote I/O station units	- 64 units max.		
	B: Number of remote device station units	- 42 units max.		
	C: Number of local station/intelligent device station units	- 26 units max.		
	D: Number of reserved station units*			
	* Unregistered station numbers between the station number 1 and the last station number are counted as reserved station units.			
Communication method	Broadcast polling method			
Synchronization method	Frame synchronous method			
Encoding method	NRZI method			
Transmission path type	Bus (RS-485)			
Transmission format	HDLC compliant			
Error control method	CRC ( $X^{16} + X^{12} + X^5 + 1$ )			
Connection cable	Ver. 1.10-compatible CC-Link dedicated cable			
Contact output section	Number of output points	16 points		
	Insulation method	Relay insulation		
	Rated switching voltage/current	24 V DC 2 A (resistance load)		
		240 V AC 2 A (COSφ=1)	/1 point, 8 A/1 common	
		(24 V DC 2 A (charge de résistance)) (240 V AC 2 A (COSφ=1))	(/1 point, 8 A/1 commun)	
	Min. switching load	5 V DC, 1 mA		
	Max. switching load	264 V AC 2 A, 125 V DC 2 A		
Life	Mechanical: 20,000,000 times or more, electrical: 100,000 times or more at rated switching voltage/current			

- \*1 This indicates the assumed area of electric distribution to which the device is connected, the area ranging from public distribution to factory machinery. The measurement category II applies to the device power-supplied from fixed facility. The surge voltage of this product is 2500 V up to the rated voltage of 300 V. (IEC 60664-1)
- \*2 The index indicates the level of conductive substance at the device's operating environment. Contamination level 2 means only non-conductive substance. However, occasional condensation may lead to temporary conduction. (IEC 60664-1)
- \*3 It is only for products with demand control function.
- \*4 If the unit is reset when power failure compensation is not available by expiration of power failure compensation period, set time would be changed to the initial status (00:00 on 1st of January, 2002).  
If the time is changed with this status, measured data may be disappeared.  
Necessary data should be measured before changing the time setting.  
About the data collecting method please refer to "Data Collecting" part in chapter 4.7.1 for maintenance of the user's manual (Settings).
- \*5 For UL/c-UL standard, please use the copper conductors wire which temperature rating is 60 °C /75 °C.

To make EcoWebServerIII EMC-compatible, the noise reduction parts must be installed in accordance with the following.  
 The noise reduction must be the parts of the table below or equivalent.

Parts name	Model name	Quantity	Manufacturer	Distance from the terminal
EMI FILTER	NF2060A-RQ	2	SOSHIN ELECTRIC CO.,LTD	100mm
CLAMP FILTER	ZCAT2235-1030A	3	100mm	

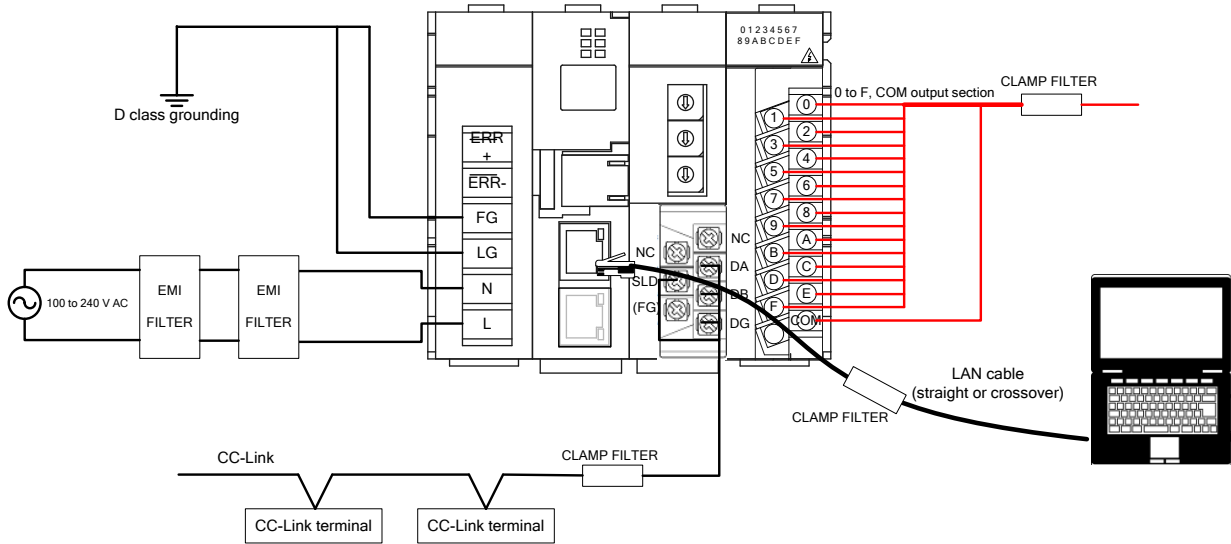

## 9.2 Operation environment

The system environment requirements for this software to properly operate as follows:

[PC]

Item	Description
OS (basic software)	Microsoft® Windows® 7 Professional (32-bit or 64-bit) (English version) SP1 Microsoft® Windows® 8.1 Pro (32-bit or 64-bit) (English version) Microsoft® Windows® 10 Pro (32bit, 64bit) (English version)
CPU	1 GHz or higher Pentium® processor, or compatible microprocessor (DOS/V compatible)
Memory *1	1 GB or more
Hard disk *1	Save data collected by EcoWebServerIII to PC, enough disk space for the data is required
CD drive	One or more drives (required to install the setting software)
Display resolution	1,280 x 1,024 pixels or more
Display color	65,536 colors or more
Input device	A mouse and a keyboard
English input system	The system included in OS (English version only)
External interface	10BASE-T/100BASE-TX Memory card reader (when writing / reading / confirming a project via drive by setting software)
Web browser *2	Microsoft Internet Explorer® 9 (32-bit), 10 (32-bit), or 11(32-bit) Microsoft Edge Google Chrome

\*1 Note that the required memory and free space of hard disk vary depending on the system environment.

\*2 Operation check for Microsoft Edge is done in version 38.  
Operation check for Google Chrome is done in version 54.

[Tablet \*3]




Item	Description	
OS	Android6.0	iOS10
Web browser *4	Google Chrome	Safari

\*3 Tablet is only for browsing the web screen. Setting software cannot be used on the tablet.

\*4 Operation check for Google Chrome is done in version 54.  
Operation check for Safari is done in version 10.

## 10. External Dimensions

### 10.1 External dimensions

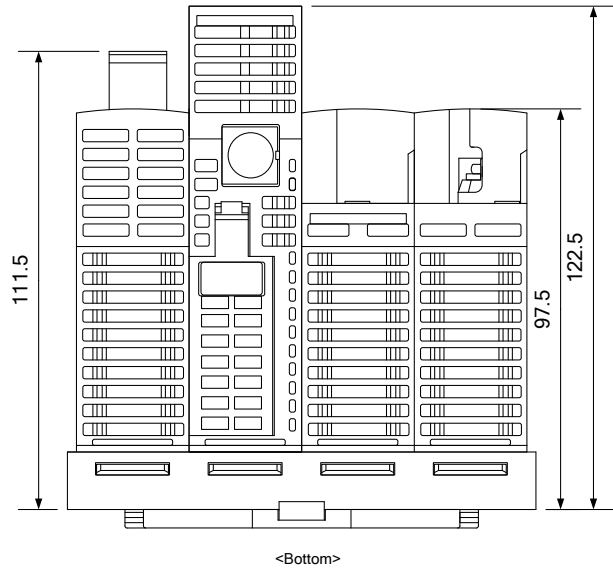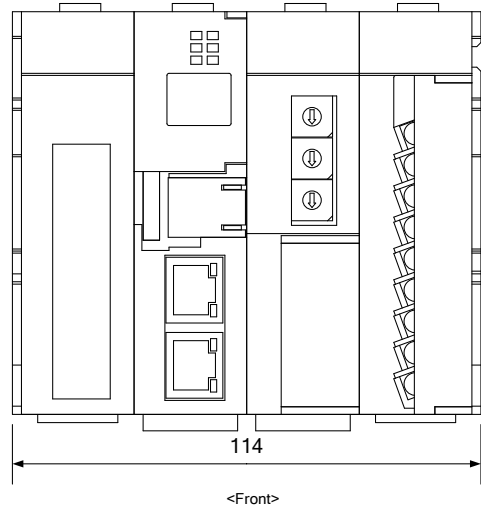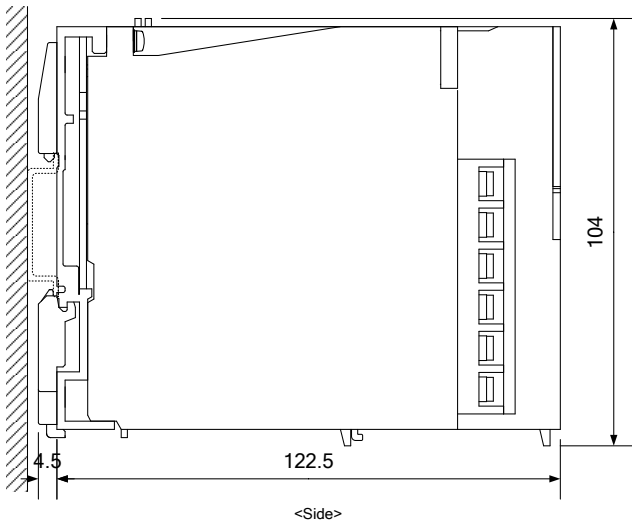


(Unit: mm)

## 10.2 Setting conditions


The space conditions is necessary for heat dissipation and battery replace.

\*1 It is no problem to remove the LAN port cap during the operating.

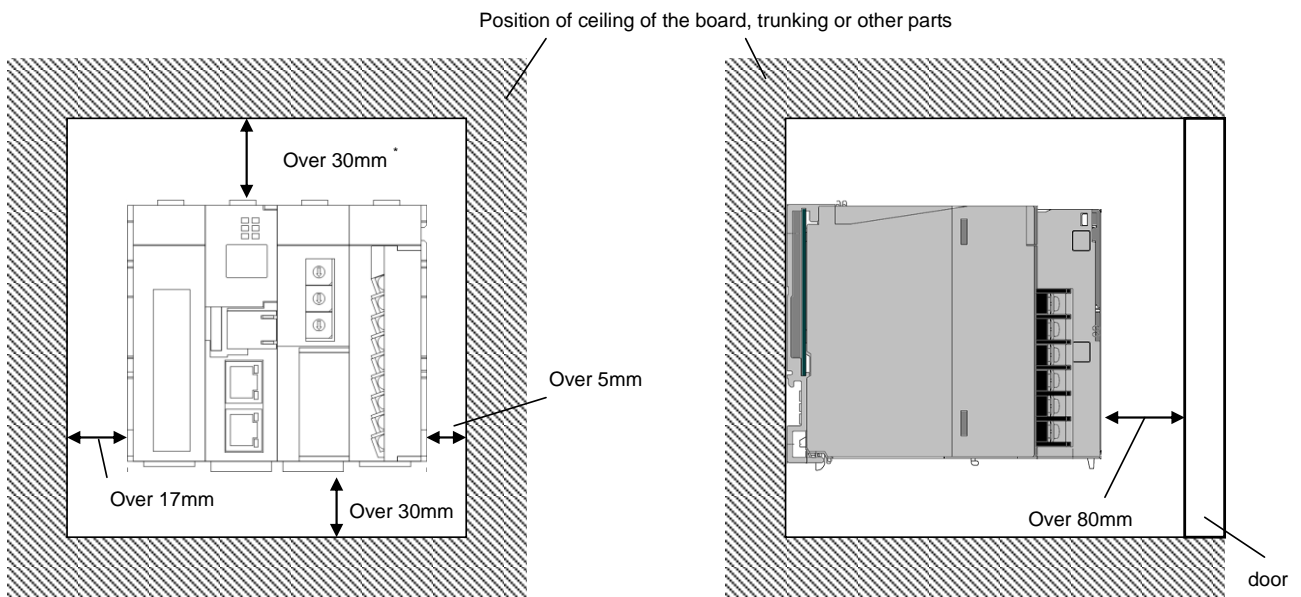


\* When trunking is less than 50mm. In other cases is over

## 11. Options

Product name	Model name
 <p>Replacement battery</p>	Q6BAT

## 12. Troubleshooting

If the product gives off abnormal noise, smell, smoke or heat, turn the power off immediately. Check the following items for troubleshooting.

Symptoms	Check items
Nothing is displayed.	<ul style="list-style-type: none"> <li>● Is power supply (100 to 240 V AC, 50/60 Hz) properly connected between L and N on the terminal block of the power supply section?</li> <li>● Is there any short-circuit or break in the power line?</li> </ul>
Graphs cannot be displayed.	Is JavaVM (Java Virtual Machine) installed? You need to install JavaVM in client PCs to display graphs. Visit the following URL for installation. <a href="http://www.java.com/">http://www.java.com/</a>
The "ERR." LED on the CC-Link communication section is lighting or blinking.	Is there any error in communication with CC-Link terminal devices? Check whether CC-Link terminal devices, CC-Link station numbers and CC-Link baud rate are properly set and communication cables and termination resistance are properly connected.
The "ERR." LED on the server section is lighting.	<ul style="list-style-type: none"> <li>● The battery is at the end of its life. Replace the battery. (See "6.2 Replacing battery".)</li> <li>● Please check if the battery is properly connected.</li> </ul>
The "STA." LED on the server section is blinking for a long time.	The data in memory card is being restored during startup. The product starts up normally after a few minutes.
"E1" is displayed on the 7-segment LED on the server section.	Access to the internal memory has failed. Reset the product.
"E2" is displayed on the 7-segment LED on the server section.	Access to memory card has failed. Reset the product.
"E3" is displayed on the 7-segment LED on the server section.	Automatic time synchronization with the SNTP server has failed. Check whether communication with the SNTP server is normally running or settings in the SNTP server are correct.
"E4" is displayed on the 7-segment LED on the server section.	File transfer to the FTP server has failed. Check whether communication with the FTP server is normally running or settings in the FTP server are correct.
The indication rotates on the 7-segment LED on the server section.	Is any CompactFlash card other than that supplied with the product connected? Only the supplied CompactFlash card can be used. Connect the supplied card. Please compare CompactFlash and the right side of main product by the sheet in the right. 
"01" is blinking on the 7-segment LED on the server section.	The battery backup RAM is initialized when you use the product for the first time or when you keep the product nonenergized for more than 3 minutes with the battery exhausted or disconnected.

If you cannot solve your problem according to the check items above, contact your supplier or us.

## 13. Warranty

- This document and product have undergone strict quality control and inspection before delivery, but in the unlikely event that the document or product is defective in manufacture, our company shall provide replacement. Contact the distributor from which you purchased them. However, this warranty does not apply to the product or document that has been damaged by acts of God or misapplication.
- Our company shall not be liable for any damages arising out of your or third parties' system troubles, legal problems, misapplication, failures during use, or any other defects.
- The product is warranted for a period of less than one (1) year from the date of your purchase or from the date of delivery to your specified location or within eighteen (18) months from the date of shipment from our factory (from the month and year of manufacture), whichever is less.
- The warranty period shall not be renewed after repair.

**MEMO**

# MEMO



## **Software License Agreement**

This "Software License Agreement" (hereinafter referred to as "the Agreement") is applicable to the relevant software (hereinafter referred to as "the Software") manufactured and sold by the Mitsubishi Electric Corporation (hereinafter referred to as "Mitsubishi Electric"). Software means all programs on the recording media and all related documents.

### **Article 1 (License of use)**

Mitsubishi Electric shall hereunder agree to grant the user the license to use the Software, and the user shall accept all provisions stated below and agree not to assign such license of use to anyone other than contractors and not to possess an exclusive license of use.

### **Article 2 (Reproduction of the Software)**

The user must not reproduce all or part of the Software, except for the following:

- (1) The reproduction of the Software is only allowed when this is for the security of the Software and the use of such reproduction is limited to the designated computer. This shall only apply to the software for which preparations for enabling the reproduction of the Software has been made.

### **Article 3 (Use for computers other than the designated computer)**

The Software shall not be used for computers other than the designated computer. However, if any of the following events occurs, the Software can temporarily be used for a computer other than the designated computer, for the period until such event ceases to exist:

- (1) The designated computer cannot be used due to the work for maintenance, adjustment, failure, etc.,  
or
- (2) The installation of the designated computer is not completed.

### **Article 4 (Limitation of liability)**

- (1) Mitsubishi Electric shall not guarantee that the Software is suitable or useful for the specific purpose intended by the user.
- (2) Mitsubishi Electric shall assume no liability for any damage to the user or any third party's claim against the user, arising from the execution of the license of use granted to the user under the Agreement.

### **Article 5 (Alteration of the Software by user)**

Any modification of the Software by the user shall not be allowed without written permission from Mitsubishi Electric. Mitsubishi Electric shall assume no responsibility for the Software that has been modified by the user.

### **Article 6 (Copyright)**

The copyright to the Software shall belong to the Mitsubishi Electric. The copyright to any reproductions described in Article 2 shall also belong to Mitsubishi Electric. However, the recording media on which the Software is recorded shall not belong to Mitsubishi Electric.

### **Article 7 (Confidentiality)**

The user shall keep confidential, and must not disclose, the Software, its reproductions, and the materials related to these.

The user must not leak to a third party any of Mitsubishi Electric's business secrets that the user may get to know under the Agreement.

### **Article 8 (Duration of the Agreement)**

The Agreement shall come into force when the user agrees to the Agreement and installs the Software, and shall continue in force for the duration until the Agreement becomes invalid due to any of the following:

- (1) The user can terminate the license of use, within one month after written notice is given to Mitsubishi Electric.
- (2) Mitsubishi Electric can terminate the license of use, if the user violates the Agreement.

### **Article 9 (Domestic use only)**

The user must not take the Software out of Japan, or send it to any area outside Japan, without prior written permission from Mitsubishi Electric.

### **Article 10 (Termination)**

When the license of use under the Agreement is terminated, the original Software, and all its reproductions, printed materials, etc. shall be returned to, or a document proving that these are destroyed shall be sent to, Mitsubishi Electric, within one month from the date of such termination. All costs for such return or destruction shall be incurred by the user.


**三菱省エネデータ収集サーバEcoServerⅢ(MES3-255B/MES3-255C)定格銘板位置について**

**三菱节能数据收集服务器EcoWebServerⅢ(MES3-255C-CN) 关于额定铭板的位置**

**Mitsubishi Energy Saving Data Collecting Server EcoWebServerⅢ(MES3-255C-EN)  
additional information on the place of the rating label**



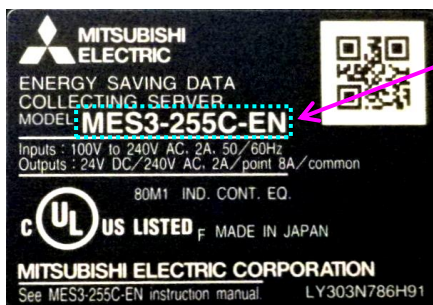

**定格銘板例 / 额定铭板参考例 / Example of the rating label**

MES3-255C-EN の例です。  
以 MES3-255C-EN 为例。  
Example of MES3-255C-EN is shown below.




形名 / 型号 / Model

**定格銘板位置 / 关于额定铭板的位置 / The place of the rating label**

<p>■MES3-255B 本製品の定格銘板は右側面にあります。</p>  <p>定格銘板</p>	<p>■MES3-255C-CN 本产品的额定铭板在产品的右侧面。</p>  <p>额定铭板</p>
<p>■MES3-255C 本製品の定格銘板は右側面にあります。</p>  <p>定格銘板</p>	<p>■MES3-255C-EN The rating label can be found on the right side of the product.</p>  <p>the rating label</p>

## Trademarks

- Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Vista<sup>®</sup>, Windows<sup>®</sup>7, Windows<sup>®</sup>8.1, Windows<sup>®</sup>10, and Internet Explorer<sup>®</sup> are trademarks, registered trademarks and products of Microsoft Corporation in the United States and/or other countries.
-  , all Java-based trademarks and logos are registered trademarks of Oracle Corporation and its affiliated companies in the United States and/or other countries.
- iOS is a registered trademark of Cisco Corporation in the United States.
- Android, Chrome is a registered trademark of Google Inc.
- Safari is a registered trademark of Google Inc.
- Ethernet is a registered trademark of Xerox Corporation in the United States.
- MODBUS<sup>®</sup> is a registered trademark of Schneider Automation Inc.
- QR Code is a registered trademark of Denso Wave Incorporated.
- EcoWebServer is a registered trademark of Mitsubishi Electric Corporation.
- Other companies and product names in the manual are registered trademarks or trademarks of their respective owners.
- Trademark symbols such as "TM", "©" etc. may not be specified.

# Mitsubishi Energy Saving Data Collecting Server EcoWebServerIII

## Service Network

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Bangladesh	PROGRESSIVE TRADING CORPORATION	HAQUE TOWER,2ND FLOOR,610/11,JUBILEE ROAD, CHITTAGONG, BANGLADESH	+880-31-624307
	ELECTRO MECH AUTOMATION& ENGINEERING LTD.	SHATABDI CENTER, 12TH FLOOR, SUITES: 12-B, 292, INNER CIRCULAR ROAD, FAKIRA POOL, MOTIJHEEL, DHAKA-1000, BANGLADESH	+88-02-7192826
Belarus	Tehnikon	Oktyabrskaya 19, Of. 705, BY-220030 Minsk, Belarus	+375 (0)17 / 210 46 26
Belgium	Koning & Hartman B.V.	Woluwelaan 31, BE-1800 Vilvoorde, Belgium	+32 (0)2 / 2570240
Brazil	Mitsubishi Electric Do Brasil Comercio E Servicos Ltda.	Av. Adelino Cardana, 293 -21 and. - Bethaville, 06401-147, Barueri/SP - Brasil	+55-11-4689-3000
Cambodia	DHINIMEX CO.,LTD	#245, St. Tep Phan, Phnom Penh, Cambodia	+855-23-997-725
Chile	Rhona S.A.	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
China	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai,200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. North China Branch	9/F, Office Tower1 Henderson Centre 18 Jianguomennei Dajie DongCheng district Beijing 100005	+86-10-6518-8830
	Mitsubishi Electric Automation (China) Ltd. NorthEast China Branch	Room 2302,President Building Tower C,No.69 Heping North Avenue, Heping District,Shenyang,110003	+86-24-2259-8830
	Mitsubishi Electric Automation (China) Ltd. South China Branch	Room 2512-2516, Great China International Exchange Square, Jintian Rd.S., Futian District, Shenzhen, 518034	+86-755-2399-8272
	Mitsubishi Electric Automation (China) Ltd. South China Branch	Room 1609, North Tower, The Hub Center, No.1068, Xing Gang East Road, Haizhu District, GuangZhou, China 510335	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. SouthWest China Branch	1501,1502,1503,15F,Guang-hua Centre,Block C,NO.98 Guang Hua North 3th Road Chengdu,610000	+86-28-8446-8030
	Mitsubishi Electric Automation (Hong Kong) Ltd.	20/F, Cityplaza One, 1111 king's Road, TaiKoo shing, Hong Kong	+852-2510-0555
Colombia	Proelectrico Representaciones S.A.	Carrera 42 # 75-367 Bod 109 Itagui Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEIJER ELECTRONICS A/S	LYKKEGARDSVEJ 17, DK-4000 ROSKILDE	+45 (0)46/ 75 76 66
Egypt	Cairo Electrical Group	9, Rostoum St. Garden City P.O. Box 165-11516 Maglis El-Shaab,Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V.	25, Boulevard des Bouvets, F-92741 Nanterre Cedex	+33 (0) 1 / 55 68 55 68
Germany	Mitsubishi Electric Europe B.V.	Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	+49 (2102) 4860
Greece	KALAMARAKIS - SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOU ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
	UTEKO	5, MAVROGENOUS STR., 18542 PIRAEUS, Greece	+30-211-1206-900
Hungary	Meltrade Ltd.	Fertő utca 14. HU-1107 Budapest, Hungary	+36 (0)1-431-9726
India	Mitsubishi Electric India Private Limited	2nd Floor, Tower A&B, Cyber Greens, DLF Cyber City, DLF Phase-III, Gurgaon - 122 022 Haryana, India	+91-124-4630300
Indonesia	PT.Mitsubishi Electric Indonesia	Gedung Jaya 8th floor, J.L.MH. Thamrin No.12 Jakarta Pusat 10340, Indonesia	+62-21-3192-6461
	P. T. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353 (0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972 (0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-60531
Kazakhstan	Kazpromavtomatika	ul. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	9F Gangseo Hangang xi-tower, 401 Yangcheon-ro, Gangseo-gu, Seoul 07528 Korea	+82-2-3660-9572
Laos	AROUNKIT CORPORATION IMPORT- EXPORT SOLE CO.,LTD	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS	+856-20-415899
Lebanon	Comptoir d'Electricite Generale-Liban	Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+961-1-240445
Lithuania	Rifas UAB	Tinklu 29A, LT-5300 Panevezys, Lithuania	+370 (0)45-582-728
Malaysia	Mitric Sdn Bhd	No. 5 Jalan Pemberita U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam,Selangor, Malaysia	+603-5569-3748
Malta	ALFATRADE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356 (0)21-697-816
Maroco	SCHIELE MAROC	KM 7,2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Mexico	Mitsubishi Electric Automation, Inc.	Mariano Escobedo 69, Col. Zona Industrial, Tlalnepantla, MEX - 54030 - MX	+55-3067-7500
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161,Yangon,Myanmar	+95-(0)1-202589
Nepal	Watt&Volt House	KHA 2-65,Volt House Dilibazar Post Box:2108,Kathmandu,Nepal	+977-1-4411330
Netherlands	Imtech Marine & Offshore B.V.	Sluisjesdijk 155, NL-3087 AG Rotterdam, Netherlands	+31 (0)10-487-19 11
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS	Leivikasen 43B, NO-5179 Godvik, Norway	+47 (0)55-506000
Middle East Arab Countries & Cyprus	Comptoir d'Electricite Generale-International-S.A.L.	Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Pakistan	Prince Electric Co.	2-P GULBERG II, LAHORE, 54600, PAKISTAN	+92-42-575232, 5753373
	AL-KAMAL GROUP	OFFICE NO.7&8, 1ST FLOOR, BARKAT ALI KHAN CENTER, 101, CIRCULAR ROAD, LAHORE. PAKISTAN	+92-42-37631632
Philippines	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, Edsa Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63-(0)2-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 50, 32-083 Balice, Poland	+48 (0) 12 630 47 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373 (0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Aleea Lacul Morii Nr. 3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric Europe B.V. Moscow Branch	52, bld. 3 Kosmodamianskaya Nab. 115054, Moscow, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421 (0)51 - 7580 611
	SIMAP	Jana Derku 1671, SK - 91101 Trencin, Slovakia	+ 421 (0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386 (0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubi 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34 (0)93-565-3131
Sweden	Euro Energy Components AB	Järnvägsgatan 36, S-434 24 Kungsbacka, Sweden	+46 (0)300-690040
Switzerland	TriElec AG	Muehlentalstrasse 136, CH-8201 Schaffhausen	+41-(0)52-6258425
Taiwan	Setsuyo Enterprise Co., Ltd	5th Fl., No.105, Wu Kung 3rd, Wu-Ku Hsiang, Taipei, Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrungruang Road,Klong Mahanak Pomprab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	GTS	Bayraktar Bulvanı Nutuk Sok. No:5, Posta Kutusu34384, TR-34775 Yukan Dudullu-Uemraniye, Istanbul, Turkey	+90 (0)216 526 3990
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts. AL10 8XB, United Kingdom	+44 (0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
Venezuela	Adesco S.A.	Calle 7 La Urbina Edificio Los Robles Locales C y D Planta Baja, Caracas - Venezuela	+58-212-241-9952
Vietnam	Mitsubishi Electric Vietnam Co.,Ltd. Head Office	Unit01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam	+84-8-3910-5945
	Mitsubishi Electric Vietnam Co.,Ltd. Hanoi Branch	6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi City, Vietnam	+84-4-3937-8075

**MITSUBISHI ELECTRIC CORPORATION**  
HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN